## 5.3.3 AFTER SWITCHING ON, THE HEATER SWITCHES REPEATEDLY AFTER APPROX. 30 SECONDS ON FAULT

