

PERIODIC MAINTENANCE SCHEDULE WLWB

	BEFORE TRIPS	RT. FUEL STOPS	1000 MILES	5000 MILES	5000 MI./6 MO.	12000 MI./6 MO.	15000 MI./12 MO.	25000 MI./12 MO.	25000 MI./6 MO.	50000 MI./12 MO.	50000 MI./6 MO.	AS REQUIRED	PERIODICALLY	100 HOURS	200 HOURS	400 HOURS	500 HOURS	TWO YEARS
CHECK ENGINE OIL	X	X																
CHECK TIRE PRESSURE	X	X																
CHECK ENGINE COOLANT	X	X																
CHECK HYDRONIC HEAT RESERVOIR	X	X																
CHECK AUTO. TRANS.	X	X																
CHECK BATTERY FLUID LEVEL (COACH)	X	X																
CHECK DRIVE BELTS	X	X																
CHECK GENERATOR OIL	X	X																
CHECK GENERATOR COOLANT	X	X																
CHECK GENERATOR BELT	X	X											X					
TORQUE LUG NUTS		X											X					
CHECK REAR AXLE OIL		X																
CHECK WHEEL BAG, LUBE, FRONT & TAG		X																
CHECK HYDRAULIC FAN RESERVOIR		X																
CHECK AIR CLEANER INDICATOR		X																
RACOR FUEL FILTER, DRAIN WATER		X																
LUBE STEERING LINKAGE FITTINGS		X																
CHECK COOLANT HOSES				X														
CHANGE ENGINE OIL				X														
CHANGE ENGINE OIL FILTER				X														
ROTATE AND BALANCE WHEELS				X														
CHANGE ENGINE FUEL FILTER				X														
LUBE PROPELLOR SHAFT FITTINGS				X														
CHANGE HYDRAULIC FAN FLUID & FILTERS***				X														
CHANGE REAR AXLE OIL,**				X														
LUBE STRG. COLUMN & BRAKE CAM FITTINGS				X														
LUBE BRAKE SLACK ADJUSTER FITTINGS				X														
CHECK AIR DRYER (BENDIX)				X														
CHANGE AUTO. TRANS. FLUID & FILTERS *				X														
CHECK LEVELING JACK FLUID				X														
CHANGE WHEEL BEARING LUBE				X														
SERVICE BATTERY CABLES & TERMINALS				X														
DRAIN ACCESSIBLE AIR RESERVOIRS				X														
SERVICE WATER HEATER				X														
SERVICE REFRIGERATOR				X														
AWNINGS - POLISH HARDWARE				X														
LUBE FRT. AXLE & TIE ROD END FITTINGS				X														
CHANGE RACOR FUEL FILTER ELEMENT				X														
CHANGE ENGINE AIR CLEANER ELEMENT				X														
CHANGE AIR DRYER CARTRIDGE				X														
AWNINGS - WASH				X														
FUEL TANK - DRAIN WATER				X														
CHECK RACOR FILTER VACUUM GAGE				X														
CLEAN ROOF A/C FILTERS				X														
LEAK TEST LPG SYSTEM				X														
ICE MAKER - CLEAN COILS				X														
CHANGE GENERATOR OIL				X														
CLEAN GENERATOR FUEL FILTER ELEMENT				X														
CLEAN GENERATOR AIR CLEANER ELEMENT				X														
CHANGE GENERATOR OIL FILTER				X														
CHECK GENERATOR COOLANT HOSES				X														
CHANGE GENERATOR FUEL FILTER ELEMENT				X														
CHANGE GENERATOR AIR CLEANER ELEMENT				X														
REPLACE ENGINE COOLANT HOSES				X														
REPLACE ENGINE DRIVE BELTS				X														
REPLACE GENERATOR COOLANT HOSES				X														
REPLACE GENERATOR BELT				X														

NOTE
ALWAYS CONSULT MANUFACTURER'S OWNER'S MANUALS. IN CASE OF APPARENT CONFLICT, FOLLOW MANUFACTURER'S RECOMMENDATIONS. WHERE BOTH MILEAG. AND TIME PERIOD ARE GIVEN, USE WHICHEVER COMES FIRST.

* CHANGE EXTERNAL FILTER AFTER FIRST 5000 MILES.
** CHANGE AFTER FIRST 1000-3000 MILES.

*** WHEN RED LIGHT COMES "ON" ON REAR ENGINE PANEL.