

TABLE OF CONTENTS

1	INTRODUCTION	1-1
2	SAFETY PRECAUTIONS	2-1
2.1	STANDS	2-1
2.2	GLASSES	2-1
2.3	WELDING	2-2
2.4	WORK PLACE	2-2
2.5	CLOTHING	2-3
2.6	ELECTRIC TOOLS	2-3
2.7	AIR	2-4
2.8	DIAGNOSTIC TOOLS	2-4
2.9	FLUIDS AND PRESSURE	2-4
2.10	BATTERIES	2-5
2.11	FIRE	2-6
2.12	PAINT	2-6
2.13	FLUOROELASTOMER	2-6
3	HARDWARE AND WIRING	3-1
3.1	MOTOR CONTROL MODULE	3-3
3.1.1	ENGINE HARNESS	3-3
	MCM 120-PIN CONNECTOR FOR SERIES 60 ENGINES	3-4
	MCM 120-PIN CONNECTOR FOR MBE 900 ENGINES	3-8
	MCM 120-PIN CONNECTOR FOR MBE 4000 ENGINES	3-12
	CONNECTOR BRACKETS	3-16
	MCM 21-PIN AND 31-PIN CONNECTORS	3-17
3.1.2	DPF HARNESS	3-20
	DPF HARNESS – VERTICAL MOUNT ATD (31-PIN TO 10 PIN CONNECTOR)	3-22
	DPF HARNESS – HORIZONTAL MOUNT ATD (31-PIN TO 10-PIN CONNECTOR/2-PIN CONNECTOR)	3-24
3.2	COMMON POWERTRAIN CONTROLLER	3-27
3.2.1	ENVIRONMENTAL CONDITIONS	3-29
	TEMPERATURE	3-29
	WATER INTRUSION	3-29
3.2.2	CPC VEHICLE INTERFACE HARNESS	3-30
	FREQUENCY INPUT	3-31
	DIGITAL INPUTS	3-32
	DIGITAL OUTPUTS	3-32
3.2.3	VIH WIRING	3-34
	TRUCK APPLICATIONS	3-34
	VOCATIONAL APPLICATIONS	3-38
	COACH APPLICATIONS	3-42
	FIRE TRUCK APPLICATIONS	3-46
	CRANE APPLICATIONS	3-50
	TRANSIT BUS APPLICATIONS	3-54

	VIH TO MCM CONNECTOR WIRING	3-58
	VIH POWER WIRING	3-61
	WIRE RESISTANCES	3-63
	COMMUNICATIONS – SAE J1939 DATA LINK	3-63
	COMMUNICATIONS – PROPRIETARY ENGINE-CAN DATA LINK	3-65
3.2.4	POWER SUPPLY – 12 VOLT SYSTEM	3-65
	AVERAGE CURRENT DRAW	3-66
	BATTERY ISOLATOR	3-66
	MAIN POWER SHUTDOWN	3-67
3.2.5	FUSES	3-68
3.2.6	CONNECTORS	3-70
	DATA LINK CONNECTOR	3-72
3.3	WIRES AND WIRING	3-73
3.3.1	GENERAL REQUIREMENTS	3-73
3.3.2	GENERAL WIRE	3-73
3.3.3	CRIMP TOOLS	3-74
3.3.4	DEUTSCH TERMINAL INSTALLATION AND REMOVAL	3-74
	DEUTSCH TERMINAL INSTALLATION GUIDELINES	3-74
	DEUTSCH TERMINAL REMOVAL	3-76
3.3.5	SPLICING GUIDELINES	3-78
	CLIPPED AND SOLDERED SPLICING METHOD	3-78
	SPLICING AND REPAIRING STRAIGHT LEADS-ALTERNATE METHOD 1	3-80
	SPLICING AND REPAIRING STRAIGHT LEADS - ALTERNATE METHOD 2	3-83
	SHRINK WRAP	3-85
	STAGGERING WIRE SPLICES	3-86
3.4	CONDUIT AND LOOM	3-87
3.5	TAPE AND TAPING	3-89
3.6	SENSORS	3-91
3.6.1	FACTORY-INSTALLED SENSORS	3-92
3.6.2	OEM-INSTALLED SENSORS	3-94
3.6.3	AMBIENT AIR TEMPERATURE SENSOR	3-95
	AMBIENT AIR TEMPERATURE SENSOR INSTALLATION	3-96
3.6.4	ENGINE COOLANT LEVEL SENSOR	3-97
3.6.5	TURBO COMPRESSOR IN TEMPERATURE SENSOR	3-101
3.6.6	VEHICLE SPEED SENSOR	3-102
	MAGNETIC PICKUP	3-103
	SAE J1939 DATA LINK	3-105
	VSS ANTI-TAMPER	3-105
3.7	LAMPS	3-107
3.7.1	AMBER WARNING LAMP	3-107
	AWL AND PASSMART	3-107
	AMBER WARNING LAMP REQUIREMENTS AND GUIDELINES	3-107
3.7.2	RED STOP LAMP	3-108
	RED STOP LAMP REQUIREMENTS AND GUIDELINES	3-108
3.7.3	DPF REGENERATION LAMP	3-109
	DPF REGENERATION LAMP REQUIREMENTS AND GUIDELINES	3-109
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	3-109

3.7.4	HIGH EXHAUST SYSTEM TEMPERATURE LAMP	3-110
	HIGH EXHAUST SYSTEM TEMPERATURE LAMP REQUIREMENTS AND GUIDELINES	3-110
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	3-110
3.7.5	MALFUNCTION INDICATOR LAMP	3-111
	MALFUNCTION INDICATOR LAMP REQUIREMENTS AND GUIDELINES	3-111
3.7.6	LOW OIL PRESSURE LAMP	3-112
	REQUIREMENTS AND GUIDELINES	3-112
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	3-112
3.7.7	CRUISE ACTIVE LAMP	3-113
	CRUISE ACTIVE LAMP REQUIREMENTS AND GUIDELINES	3-113
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	3-113
3.7.8	DECELERATION LAMP	3-114
	DECELERATION LAMP REQUIREMENTS AND GUIDELINES	3-114
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	3-114
3.7.9	LOW BATTERY VOLTAGE LAMP	3-115
	LOW BATTERY VOLTAGE LAMP REQUIREMENTS AND GUIDELINES	3-115
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	3-115
3.7.10	LOW COOLANT LEVEL LAMP	3-116
	LOW COOLANT LEVEL LAMP REQUIREMENTS AND GUIDELINES	3-116
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	3-116
3.7.11	OPTIMIZED IDLE ACTIVE LAMP	3-117
	OPTIMIZED IDLE ACTIVE LAMP REQUIREMENTS AND GUIDELINES	3-117
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	3-117
3.7.12	WAIT TO START LAMP	3-118
	WAIT TO START LAMP REQUIREMENTS AND GUIDELINES	3-118
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	3-118
3.7.13	AGS2 BACKUP LAMP	3-119
	AGS2 BACKUP LAMP REQUIREMENTS AND GUIDELINES	3-119
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	3-119
3.7.14	AGS2 CHECK TRANS LAMP	3-120
	AGS2 CHECK TRANS LAMP REQUIREMENTS AND GUIDELINES	3-120
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	3-120
3.7.15	AGS2 TRANS TEMP LAMP	3-121
	AGS2 TRANS TEMP LAMP REQUIREMENTS AND GUIDELINES	3-121
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	3-121
4	INPUTS AND OUTPUTS	4-1
4.1	INPUTS	4-3
4.1.1	AIR CONDITION STATUS	4-4
	INSTALLATION	4-4
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-4
4.1.2	ABS ACTIVE	4-5
	INSTALLATION	4-5
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-5
4.1.3	AUXILIARY SHUTDOWN #1	4-6
	INSTALLATION	4-6

	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-6
4.1.4	CLUTCH SWITCH	4-7
	INSTALLATION	4-7
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-7
4.1.5	CRUISE CONTROL ON/OFF SWITCH	4-8
	INSTALLATION	4-8
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-8
4.1.6	CRUISE CONTROL RESUME/ACCEL SWITCH AND SET/COAST SWITCH	4-9
	INSTALLATION	4-9
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-9
	DIAGNOSTICS	4-9
4.1.7	DIAGNOSTIC REQUEST SWITCH	4-10
	INSTALLATION	4-10
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-10
4.1.8	DUAL-SPEED AXLE SWITCH	4-11
	INSTALLATION	4-11
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-11
4.1.9	ENGINE BRAKE DISABLE	4-12
	INSTALLATION	4-12
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-12
4.1.10	ENGINE BRAKE LOW & MEDIUM	4-13
	INSTALLATION	4-13
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-13
4.1.11	FAN OVERRIDE	4-13
	INSTALLATION	4-13
4.1.12	FAST ENGINE HEAT UP SWITCH	4-14
	INSTALLATION	4-14
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-14
4.1.13	IDLE VALIDATION 1 & IDLE VALIDATION 2	4-15
	INSTALLATION	4-15
4.1.14	LIMITERS FOR TORQUE, ENGINE SPEED, AND VEHICLE SPEED	4-15
	INSTALLATION	4-15
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-15
4.1.15	OPTIMIZED IDLE HOOD TILT SWITCH	4-16
	INSTALLATION	4-16
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-16
4.1.16	OPTIMIZED IDLE THERMOSTAT	4-17
	INSTALLATION	4-17
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-17
4.1.17	PARK BRAKE SWITCH	4-18
	INSTALLATION	4-18
	PROGRAMMING REQUIREMENTS & FLEXIBILITY	4-18
4.1.18	REGEN SWITCH	4-19
	INSTALLATION	4-19
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-19
4.1.19	REMOTE THROTTLE SELECT SWITCH	4-20
	INSTALLATION	4-20

	PROGRAMMING REQUIREMENTS & FLEXIBILITY	4-20
4.1.20	REMOTE PTO SWITCH	4-20
	INSTALLATION	4-20
4.1.21	RPM FREEZE	4-21
	INSTALLATION	4-21
	PROGRAMMING REQUIREMENTS & FLEXIBILITY	4-21
4.1.22	SERVICE BRAKE RELEASED SWITCH	4-22
	INSTALLATION	4-22
	PROGRAMMING REQUIREMENTS & FLEXIBILITY	4-22
4.1.23	STOP ENGINE OVERRIDE	4-23
	INSTALLATION	4-23
		4-23
4.1.24	THROTTLE INHIBIT	4-24
	INSTALLATION	4-24
4.1.25	TRANSMISSION NEUTRAL SWITCH	4-24
	INSTALLATION	4-24
	PROGRAMMING REQUIREMENTS & FLEXIBILITY	4-24
4.1.26	TRANSMISSION RETARDER ACTIVE	4-25
	INSTALLATION	4-25
	PROGRAMMING REQUIREMENTS & FLEXIBILITY	4-25
4.2	SWITCH INPUTS RECEIVED OVER J1939 DATA LINK	4-27
4.3	DIGITAL OUTPUTS – CPC	4-29
4.3.1	AGS2 BACKUP LAMP	4-30
	INSTALLATION	4-30
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-30
4.3.2	AGS2 CHECK TRANS LAMP	4-31
	INSTALLATION	4-31
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-31
4.3.3	AGS2 TRANS TEMP LAMP	4-32
	INSTALLATION	4-32
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-32
4.3.4	AMBER WARNING LAMP	4-32
	INSTALLATION	4-32
4.3.5	CRUISE ACTIVE LAMP	4-33
	INSTALLATION	4-33
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-33
4.3.6	DECELERATION LAMP	4-34
	INSTALLATION	4-34
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-34
4.3.7	DPF REGENERATION LAMP (HARDWIRED AND J1939)	4-35
	INSTALLATION	4-35
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-35
4.3.8	ENGINE BRAKE ACTIVE	4-36
	INSTALLATION	4-36
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-36
4.3.9	ETHER START	4-37
	INSTALLATION	4-37

	PROGRAMMING REQUIREMENTS & FLEXIBILITY	4-37
4.3.10	HIGH EXHAUST SYSTEM TEMPERATURE LAMP (HARDWIRED AND J1939)	4-38
	INSTALLATION	4-38
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-38
4.3.11	LOW BATTERY VOLTAGE LAMP	4-39
	INSTALLATION	4-39
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-39
4.3.12	LOW COOLANT LEVEL LAMP	4-40
	INSTALLATION	4-40
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-40
4.3.13	LOW OIL PRESSURE LAMP	4-41
	INSTALLATION	4-41
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-41
4.3.14	MALFUNCTION INDICATOR LAMP (MIL)	4-41
	INSTALLATION	4-41
4.3.15	OPTIMIZED IDLE ACTIVE LAMP	4-42
	INSTALLATION	4-42
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-42
	DIAGNOSTICS	4-42
4.3.16	OPTIMIZED IDLE ALARM	4-43
	INSTALLATION	4-43
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-43
	DIAGNOSTICS	4-43
4.3.17	RED STOP LAMP	4-44
	INSTALLATION	4-44
4.3.18	STARTER LOCKOUT	4-44
	INSTALLATION	4-44
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-44
4.3.19	TOP2 SHIFT SOLENOID	4-45
	INSTALLATION	4-45
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-45
	DIAGNOSTICS	4-45
4.3.20	TOP2 SHIFT LOCKOUT SOLENOID	4-46
	INSTALLATION	4-46
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-46
	DIAGNOSTICS	4-46
4.3.21	VEHICLE POWER SHUTDOWN	4-47
	INSTALLATION	4-47
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-47
4.3.22	WAIT TO START LAMP	4-48
	INSTALLATION	4-48
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-48
4.4	ANALOG OUTPUTS – CPC	4-49
4.4.1	PIN 3/05 – ANALOG OUTPUT	4-49
4.4.2	PIN 3/06 – ANALOG OUTPUT	4-49
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-50
4.5	PWM OUTPUT — CPC	4-51

4.5.1	PWM OUTPUT — PIN 4/12 PWM SELECTION	4-51
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-51
5	FEATURES	5-1
5.1	ACCELERATION LIMITER	5-3
5.1.1	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-3
5.2	COLD START – MBE 900 AND MBE 4000	5-5
5.2.1	OPERATION	5-5
	INITIALIZATION	5-5
	PREHEATING STATE	5-5
	WAITING FOR ENGINE START	5-6
	ENGINE START	5-6
	POST-HEATING STATE	5-6
	COOLING OFF	5-6
	OFF	5-6
5.2.2	INSTALLATION	5-6
5.2.3	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-8
5.2.4	DIAGNOSTICS	5-8
5.3	CRUISE CONTROL	5-9
5.3.1	OPERATION	5-9
	ENGINE BRAKES IN CRUISE CONTROL (OPTIONAL)	5-10
	CRUISE AUTO RESUME (OPTIONAL)	5-10
	ADAPTIVE CRUISE (OPTIONAL)	5-10
	CRUISE POWER	5-10
	CRUISE ENABLE	5-10
	SET / COAST	5-11
	RESUME / ACCEL	5-11
	CLUTCH RELEASED (MANUAL TRANSMISSIONS)	5-11
	SERVICE BRAKE RELEASED (AUTOMATIC AND MANUAL TRANSMIS- SIONS)	5-12
5.3.2	INSTALLATION	5-12
5.3.3	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-14
5.3.4	INTERACTION WITH OTHER FEATURES	5-15
5.4	DIAGNOSTICS	5-17
5.4.1	OPERATION	5-17
	FLASHING FAULT CODES WITH AWL / SEL	5-19
	PROGRAMMING REQUIREMENTS & FLEXIBILITY	5-20
5.5	DUAL SPEED AXLE	5-21
5.5.1	OPERATION	5-21
5.5.2	INSTALLATION	5-21
5.5.3	PROGRAMMING FLEXIBILITY & REQUIREMENTS	5-21
5.6	ENGINE BRAKE CONTROLS – MBE 900 AND MBE 4000	5-23
5.6.1	OPERATION	5-23
	CRUISE CONTROL OR ROAD SPEED LIMIT WITH ENGINE BRAKE	5-24
	SERVICE BRAKE CONTROL OF ENGINE BRAKES	5-24
	ENGINE BRAKE ACTIVE	5-24
	ENGINE BRAKE DISABLE	5-24

	ENGINE FAN BRAKING	5-24
	CLUTCH RELEASED INPUT	5-24
	MIN VEHICLE SPEED FOR ENGINE BRAKES	5-25
5.6.2	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-25
	CONFIGURATION FOR MBE 900 EXHAUST FLAP APPLICATIONS	5-25
	CONFIGURATION FOR MBE 900 COMPRESSION BRAKE ONLY APPLICATIONS	5-28
	CONFIGURATION FOR MBE 900 COMPRESSION AND EXHAUST BRAKE APPLICATIONS	5-31
	CONFIGURATION FOR MBE 4000 COMPRESSION BRAKE AND BRAKE GATE APPLICATIONS	5-34
	CRUISE CONTROL OF ENGINE BRAKE OPTION	5-37
	ENGINE BRAKE OPTION WITH SERVICE BRAKE	5-38
	ENGINE BRAKES OPTION WITH MINIMUM VEHICLE SPEED	5-38
5.6.3	INTERACTION WITH OTHER FEATURES	5-38
5.7	ENGINE BRAKE CONTROLS – SERIES 60	5-39
5.7.1	OPERATION	5-39
	SERVICE BRAKE CONTROL OF ENGINE BRAKES	5-39
	CRUISE CONTROL OR ROAD SPEED LIMIT WITH ENGINE BRAKE	5-40
	ENGINE BRAKE DISABLE	5-40
	ENGINE BRAKE ACTIVE	5-40
	ENGINE FAN BRAKING	5-40
	CLUTCH RELEASED INPUT	5-40
	MIN VEHICLE SPEED FOR ENGINE BRAKES	5-40
5.7.2	INSTALLATION	5-41
5.7.3	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-42
5.7.4	INTERACTION WITH OTHER FEATURES	5-45
5.8	ENGINE PROTECTION	5-47
5.8.1	OPERATION	5-47
	WARNING	5-48
	SHUTDOWN	5-48
5.8.2	STOP ENGINE OVERRIDE OPTION	5-48
5.8.3	PROGRAMMING FLEXIBILITY	5-49
5.9	ENGINE RATINGS	5-51
5.9.1	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-51
5.10	ENGINE STARTER CONTROL	5-53
5.10.1	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-54
5.11	ETHER STARTING – SERIES 60	5-55
5.12	FAN CONTROL	5-57
5.12.1	OPERATION	5-57
5.12.2	SINGLE–SPEED FAN (FAN TYPE 4)	5-58
	SINGLE-SPEED FAN INSTALLATION	5-58
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-59
5.12.3	SINGLE–SPEED FAN (FAN TYPE 7)	5-61
	SINGLE-SPEED FAN INSTALLATION	5-61
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-62
5.12.4	DUAL FANS (FAN TYPE 6)	5-64

	DUAL FANS INSTALLATION	5-65
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-66
5.12.5	TWO-SPEED FAN	5-68
	TWO-SPEED FAN INSTALLATION	5-69
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-70
5.12.6	VARIABLE SPEED FAN (FAN TYPE 3) WITHOUT FAN SPEED FEEDBACK	5-72
	INSTALLATION	5-73
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-74
5.12.7	VARIABLE SPEED FAN (FAN TYPE 2) WITH FAN SPEED FEEDBACK	5-76
	INSTALLATION	5-77
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-78
5.13	FLEET MANAGEMENT	5-81
5.13.1	OPERATION	5-81
5.13.2	DDEC DATA	5-81
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-82
5.13.3	DDEC REPORTS	5-83
5.14	FUEL ECONOMY INCENTIVE	5-89
5.14.1	OPERATION	5-89
5.14.2	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-90
5.14.3	INTERACTION WITH OTHER FEATURES.	5-90
5.15	IDLE ADJUST	5-91
5.15.1	OPERATION	5-91
5.15.2	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-92
5.16	IDLE SHUTDOWN TIMER AND PTO SHUTDOWN	5-93
5.16.1	OPERATION — IDLE SHUTDOWN NON-PTO MODE	5-93
5.16.2	OPERATION — PTO SHUTDOWN	5-94
5.16.3	IDLE SHUTDOWN TIMER AND PTO SHUTDOWN OPTIONS	5-94
	IDLE / PTO SHUTDOWN OVERRIDE	5-94
	IDLE SHUTDOWN WITH AMBIENT AIR TEMP	5-95
	IDLE SHUTDOWN WITH AMBIENT AIR TEMP CONTINUOUS OVERRIDE	5-96
	VEHICLE POWER SHUTDOWN	5-97
	MAXIMUM ENGINE LOAD SHUTDOWN	5-97
5.16.4	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-98
5.17	LIMITERS	5-101
5.17.1	OPERATION	5-101
5.17.2	INSTALLATION	5-102
5.17.3	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-103
5.18	LOW GEAR TORQUE REDUCTION	5-105
5.18.1	OPERATION	5-105
	EXAMPLE 1 — ONE TORQUE LIMIT	5-105
	EXAMPLE 2 — TWO TORQUE LIMITS	5-106
5.18.2	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-107
5.19	OPTIMIZED IDLE	5-109
5.19.1	OPERATION	5-109
	OPTIMIZED IDLE START UP SEQUENCE	5-110
	ENGINE MODE	5-110
	THERMOSTAT MODE	5-112

5.19.2	INSTALLATION	5-112
5.19.3	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-114
5.19.4	INTERACTION WITH OTHER FEATURES	5-115
5.20	PARKED REGENERATION	5-117
5.20.1	OPERATION	5-117
5.20.2	DPF PARKED (STATIONARY) REGENERATION FOR HAZARDOUS APPLICATIONS ONLY	5-118
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-119
5.21	PASSMART	5-121
5.21.1	OPERATION	5-121
5.21.2	INSTALLATION	5-122
5.21.3	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-123
5.21.4	INTERACTION WITH OTHER FEATURES	5-123
5.22	PASSWORDS	5-125
5.22.1	OPERATION	5-125
	BACK DOOR PASSWORD	5-126
	CHANGING THE PASSWORD	5-126
5.23	PROGRESSIVE SHIFT	5-127
5.23.1	OPERATION	5-127
5.23.2	LOW RANGE #1	5-128
5.23.3	LOW RANGE #2	5-128
5.23.4	HIGH RANGE	5-129
5.23.5	INSTALLATION INFORMATION	5-131
5.23.6	PROGRAMMING FLEXIBILITY	5-131
5.23.7	INTERACTION WITH OTHER FEATURES	5-132
5.24	STARTER LOCKOUT	5-133
5.24.1	OPERATION	5-133
5.24.2	INSTALLATION	5-134
5.24.3	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-134
5.25	TACHOMETER DRIVE	5-135
5.25.1	OPERATION	5-135
5.26	THROTTLE CONTROL/GOVERNORS	5-137
5.26.1	AUTOMOTIVE LIMITING SPEED GOVERNOR - ON-HIGHWAY	5-137
	ALSG ACCELERATOR PEDAL	5-137
	ALSG ACCELERATOR PEDAL INSTALLATION	5-137
	ALSG ACCELERATOR PEDAL ASSEMBLY DIAGNOSTICS	5-138
5.26.2	POWER TAKE-OFF	5-138
	CAB PTO – CRUISE SWITCH PTO	5-140
	CRUISE SWITCH PTO PROGRAMMING REQUIREMENT AND FLEXIBILITY ..	5-142
5.26.3	REMOTE PTO — PREPROGRAMMED SET SPEEDS	5-144
	PULSED INPUT USING PIN 2/9	5-145
	INSTALLATION	5-146
	GRAY CODED USING PINS 2/9, 1/11, 2/11 AND BINARY CODED	5-147
	INSTALLATION FOR GRAY CODED OR BINARY INPUT	5-148
	REMOTE PTO PROGRAMMING REQUIREMENT AND FLEXIBILITY	5-148
	REMOTE ACCELERATOR CONTROL FOR PTO OR ALSG	5-150
	REMOTE ACCELERATOR CONTROL EXAMPLE	5-150

INSTALLATION	5-151
5.26.4 RPM FREEZE	5-152
PROGRAMMING REQUIREMENTS & FLEXIBILITY	5-152
5.27 TRANSMISSION INTERFACE	5-153
5.27.1 MANUAL TRANSMISSIONS	5-153
PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-153
5.27.2 MERCEDES AGS2 TRANSMISSION	5-153
INSTALLATION	5-154
PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-156
5.27.3 EATON TOP2 OPERATION	5-157
INSTALLATION	5-158
PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-158
DIAGNOSTICS	5-159
5.27.4 EATON ULTRASHIFT TRANSMISSION	5-160
PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-160
5.27.5 EATON ULTRASHIFT ASW TRANSMISSION	5-161
PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-161
5.27.6 EATON AUTOSHIFT TRANSMISSION	5-162
PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-162
5.27.7 ZF ASTRONIC TRANSMISSION	5-163
PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-163
5.27.8 ALLISON TRANSMISSION	5-164
PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-164
5.28 VEHICLE SPEED LIMITING	5-167
5.28.1 OPERATION	5-167
5.28.2 INSTALLATION	5-167
5.28.3 PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-167
5.28.4 INTERACTION WITH OTHER FEATURES	5-168
5.29 VEHICLE SPEED SENSOR ANTI-TAMPERING	5-169
5.29.1 PROGRAMMING FLEXIBILITY	5-169
6 COMMUNICATION PROTOCOLS	6-1
6.1 OVERVIEW	6-3
6.2 SAE J1587 DATA LINK	6-4
6.2.1 MESSAGE FORMAT	6-4
6.2.2 SAE J1708/J1587 MESSAGE PRIORITY	6-5
6.2.3 SAE J1587 PIDS REQUIRING ACTION	6-5
DATA REQUEST	6-5
COMPONENT SPECIFIC REQUEST	6-5
J1587 OUTPUTS - SINGLE BYTE PARAMETERS	6-6
DOUBLE BYTE PARAMETERS	6-14
VARIABLE LENGTH PARAMETERS	6-17
6.3 SAE J1939 MESSAGES AND MESSAGE FORMAT	6-28
6.3.1 SAE J1939 SUPPORTED MESSAGES	6-29
ACC1 – ADAPTIVE CRUISE CONTROL	6-29
ACK/NACK – ACKNOWLEDGE / NEGATIVE ACKNOWLEDGE	6-30
AMB – AMBIENT CONDITIONS	6-30

ATI2 - AFTERTREATMENT INTAKE GAS 2	6-31
ATO2 - AFTERTREATMENT OUTLET GAS 2	6-31
CCSS – CRUISE CONTROL / VEHICLE SPEED SETUP	6-32
CCVS – CRUISE CONTROL / VEHICLE SPEED	6-33
CI – COMPONENT IDENTIFICATION	6-36
CM1 – CAB MESSAGE1	6-36
DM1 – ACTIVE DIAGNOSTIC TROUBLE CODES	6-38
DM2 – PREVIOUSLY ACTIVE DIAGNOSTIC TROUBLE CODES	6-40
DM3 - DIAGNOSTIC DATA CLEAR/RESET OF PREVIOUSLY ACTIVE DTCS ..	6-41
DM11 — DIAGNOSTIC DATA CLEAR/RESET FOR ACTIVE DTCS	6-41
DM13 — STOP START BROADCAST	6-42
EBC1 -- ELECTRONIC BRAKE CONTROLLER #1	6-43
EBC2 – WHEEL SPEED INFORMATION	6-44
EC – ENGINE CONFIGURATION	6-45
EEC1 -- ELECTRONIC ENGINE CONTROLLER #1	6-47
EEC2 -- ELECTRONIC ENGINE CONTROLLER #2	6-49
EEC3 -- ELECTRONIC ENGINE CONTROLLER #3	6-50
EEC4 – ELECTRONIC ENGINE CONTROLLER #4	6-50
EFL/P1 – ENGINE FLUID LEVEL/PRESSURE1	6-51
EFL/P2 – ENGINE FLUID LEVEL/PRESSURE #2	6-51
ERC1 - ELECTRONIC RETARDER CONTROLLER #1	6-52
ET1 – ENGINE TEMPERATURE #1	6-53
ET2 – ENGINE TEMPERATURE #2	6-53
ETC1 -- ELECTRONIC TRANSMISSION CONTROLLER #1	6-54
ETC2 -- ELECTRONIC TRANSMISSION CONTROLLER #2	6-55
ETC7 – ELECTRONIC TRANSMISSION CONTROLLER 7	6-56
FD – FAN DRIVE	6-57
HOURS – ENGINE HOURS, REVOLUTIONS	6-58
IC1 – INLET/EXHAUST CONDITIONS #1	6-58
IO — IDLE OPERATION	6-59
LFC – FUEL CONSUMPTION (LIQUID)	6-59
LFE – FUEL ECONOMY (LIQUID)	6-60
PTC1 – PARTICULATE TRAP CONTROL 1	6-61
PTO – POWER TAKEOFF INFORMATION	6-64
RC – RETARDER CONFIGURATION	6-65
REQUESTS	6-67
SHUTDOWN — IDLE SHUTDOWN	6-68
SOFT – SOFTWARE IDENTIFICATION	6-70
TC — TURBOCHARGER	6-71
TCFG2 — TRANSMISSION CONFIGURATION	6-72
TCO1 — TACHOGRAPH	6-73
TD — TIME/DATE	6-74
TSC1 — TORQUE SPEED CONTROL	6-74
VD — VEHICLE DISTANCE	6-76
VDHR – HIGH RESOLUTION VEHICLE DISTANCE	6-76
VEP – VEHICLE ELECTRICAL POWER	6-76

VH — VEHICLE HOURS	6-77
VI – VEHICLE IDENTIFICATION	6-77
APPENDIX A: HARNESS WIRING DIAGRAMS	A-1
APPENDIX B: ACRONYMS	B-1
APPENDIX C: PARAMETER LIST	C-1
INDEX	INDEX-1

LIST OF FIGURES

Figure 3-1	Motor Control Module	3-3
Figure 3-2	Series 60 Engine 120-pin Connector and 21-pin Connector Tie-wrapped to Brackets	3-16
Figure 3-3	Aftertreatment Device	3-20
Figure 3-4	Typical Mounting Views of an Aftertreatment Device	3-21
Figure 3-5	Vertical and Under Step Mount ATD Wiring — OEM Responsibility	3-22
Figure 3-6	Horizontal Mount ATD Wiring — OEM Responsibility	3-24
Figure 3-7	The Common Powertrain Controller	3-27
Figure 3-8	CPC Dimensions	3-28
Figure 3-9	NAFTA Architecture On-highway	3-29
Figure 3-10	Vehicle Interface Harness	3-30
Figure 3-11	Power Wiring	3-61
Figure 3-12	Main Power Supply Shutdown	3-67
Figure 3-13	Wiring for 9-pin Data Link Connector	3-72
Figure 3-14	Setting Wire Gage Selector and Positioning the Contact	3-75
Figure 3-15	Pushing Contact Into Grommet	3-75
Figure 3-16	Locking Terminal Into Connector	3-76
Figure 3-17	Removal Tool Position	3-77
Figure 3-18	Removal Tool Insertion	3-77
Figure 3-19	Positioning the Leads	3-79
Figure 3-20	Securing the Leads With a Clip	3-79
Figure 3-21	Recommended Strain Relief of Spliced Joint	3-80
Figure 3-22	Splicing Straight Leads - Alternate Method 1	3-82
Figure 3-23	Splicing Straight Leads - Alternate Method 2	3-84
Figure 3-24	The Correct and Incorrect Method of Staggering Multiple Splices	3-86
Figure 3-25	Sensor Location for the DOC and DPF	3-93
Figure 3-26	Ambient Air Temperatures Sensor Dimensions	3-95
Figure 3-27	Ambient Air Temperature Sensor Installation	3-96
Figure 3-28	Engine Coolant Level Sensor Specifications	3-97
Figure 3-29	Engine Coolant Level Sensor Installation for CPC	3-98
Figure 3-30	Engine Coolant Level Sensor Location - Top of Radiator Tank	3-99
Figure 3-31	Turbo Compressor In Temperature Sensor	3-101
Figure 3-32	Turbo Compressor In Temperature Sensor Installation	3-102
Figure 3-33	Vehicle Speed Sensor	3-102
Figure 3-34	Magnetic Vehicle Speed Sensor Installation – CPC	3-104
Figure 5-1	Grid Heater – MBE 4000	5-6
Figure 5-2	Grid Heater – MBE 900	5-7
Figure 5-3	Grid Heater – Heavy-duty Engine	5-7
Figure 5-4	Cruise Control Circuit	5-13
Figure 5-5	Flashing Fault Codes	5-19
Figure 5-6	Exhaust Flap Only – MBE 900	5-27
Figure 5-7	Compression Brake Only – MBE 900	5-30
Figure 5-8	Compression Brake and Exhaust Flap – MBE 900	5-33

Figure 5-9	Compression Brake and Brake Grate – MBE 4000	5-36
Figure 5-10	Engine Brake for DDEC VI – Series 60	5-41
Figure 5-11	Key Switch Starter Control	5-53
Figure 5-12	MCM Starter Control	5-53
Figure 5-13	Single-speed Fan – Fan Type 4	5-58
Figure 5-14	Single-speed Fan – Fan Type 7	5-61
Figure 5-15	Dual Fan (Fan Type 6)	5-65
Figure 5-16	Two-speed Fan (Fan type 0 or 1)	5-69
Figure 5-17	Variable Speed Fan without Fan Speed Feedback (Fan Type 3)	5-73
Figure 5-18	Variable Speed Fan with Fan Speed Feedback (Fan Type 2)	5-77
Figure 5-19	DDEC Reports, Trip Activity Report	5-84
Figure 5-20	DDEC Reports, Daily Engine Usage	5-85
Figure 5-21	DDEC Reports, Engine Load/RPM	5-86
Figure 5-22	DDEC Reports, Vehicle Speed/RPM	5-87
Figure 5-23	Park Brake Digital Input	5-94
Figure 5-24	Ambient Air Temperature Override	5-95
Figure 5-25	Vehicle Power Shutdown Relay	5-97
Figure 5-26	Optimized Idle System	5-113
Figure 5-27	Parked Regeneration	5-118
Figure 5-28	Progressive Shift Chart - Represents Default	5-128
Figure 5-29	Progressive Shift Corrects Problem with High and Low Gears Modified	5-130
Figure 5-30	Starter Lockout	5-134
Figure 5-31	Tachometer Drive Installation	5-135
Figure 5-32	Accelerator Pedal Installation	5-138
Figure 5-33	PTO Logic	5-139
Figure 5-34	Cab PTO Mode	5-140
Figure 5-35	Remote PTO Mode – Pulsed Input Using Pin 2/9	5-146
Figure 5-36	Remote PTO Switch	5-146
Figure 5-37	Remote PTO Gray Coded or Binary Input	5-148
Figure 5-38	Remote Accelerator Control for PTO or ALSG	5-151
Figure 5-39	AGS2 Transmission Interface to CPC/MCM – Non-multiplexed	5-154
Figure 5-40	AGS2 Transmission Interface to CPC/MCM – Multiplexed	5-154
Figure 5-41	Top2 Transmission	5-158

LIST OF TABLES

Table 2-1	The Correct Type of Fire Extinguisher	2-6
Table 3-1	MCM Connector – Series 60 (1 of 4)	3-4
Table 3-2	MCM Connector – Series 60 (2 of 4)	3-5
Table 3-3	MCM Connector – Series 60 (3 of 4)	3-6
Table 3-4	MCM Connector – Series 60 (4 of 4)	3-7
Table 3-5	MCM Connector – MBE 900 (1 of 4) – C Sample	3-8
Table 3-6	MCM Connector – MBE 900 (2 of 4) – C Sample	3-9
Table 3-7	MCM Connector – MBE 900 (3 of 4) – C Sample	3-10
Table 3-8	MCM Connector – MBE 900 (4 of 4) – C Sample	3-11
Table 3-9	MCM Connector – MBE 4000 (1 of 4) – C Sample	3-12
Table 3-10	MCM Connector – MBE 4000 (2 of 4) – C Sample	3-13
Table 3-11	MCM Connector – MBE 4000 (3 of 4) – C Sample	3-14
Table 3-12	MCM Connector – MBE 4000 (4 of 4) – C Sample	3-15
Table 3-13	21-Pin Connector to the MCM	3-17
Table 3-14	21-Pin Connector to the MCM Part Numbers	3-17
Table 3-15	31-pin MCM Pigtail Connector Part Numbers	3-18
Table 3-16	31-pin MCM Pigtail Connector	3-19
Table 3-17	DPF 10-pin Connector	3-23
Table 3-18	DDC Part Numbers for the DPF 10-pin Connector	3-23
Table 3-19	DPF 10-pin Connector and 2-pin Connector — Horizontal Mount ATD	3-25
Table 3-20	DDC Part Numbers for the DPF 10-pin and 2-pin Connector — Horizontal Mount ATD	3-25
Table 3-21	Variable Reluctance Signal Interface	3-31
Table 3-22	Connector #1 Pin Assignments – Truck Application	3-34
Table 3-23	Connector #1, 18-pin Connector, B Key	3-34
Table 3-24	Connector #2 Pin Assignments – Truck Application	3-35
Table 3-25	Connector #2, 18-pin Connector, A Key	3-35
Table 3-26	Connector #3 Pin Assignments – Truck Application	3-36
Table 3-27	Connector #3, 21-pin Connector, Key A	3-36
Table 3-28	Connector #4 Pin Assignments – Truck Application	3-37
Table 3-29	Connector #4, 18-pin Connector, Key C	3-37
Table 3-30	Connector #1 Pin Assignments – Vocational Applications	3-38
Table 3-31	Connector #1, 18-pin Connector, B Key	3-38
Table 3-32	Connector #2 Pin Assignments – Vocational Applications	3-39
Table 3-33	Connector #2, 18-pin Connector, A Key	3-39
Table 3-34	Connector #3 Pin Assignments – Vocational Applications	3-40
Table 3-35	Connector #3, 21-pin Connector, Key A	3-40
Table 3-36	Connector #4 Pin Assignments – Vocational Applications	3-41
Table 3-37	Connector #4, 18-pin Connector, Key C	3-41
Table 3-38	Connector #1 Pin Assignments – Coach Application	3-42
Table 3-39	Connector #1, 18-pin Connector, B Key	3-42
Table 3-40	Connector #2 Pin Assignments – Coach Application	3-43
Table 3-41	Connector #2, 18-pin Connector, A Key	3-43

Table 3-42	Connector #3 Pin Assignments – Coach Application	3-44
Table 3-43	Connector #3, 21-pin Connector, Key A	3-44
Table 3-44	Connector #4 Pin Assignments – Coach Application	3-45
Table 3-45	Connector #4, 18-pin Connector, Key C	3-45
Table 3-46	Connector #1 Pin Assignments – Fire Truck Application	3-46
Table 3-47	Connector #1, 18-pin Connector, B Key	3-46
Table 3-48	Connector #2 Pin Assignments – Fire Truck Application	3-47
Table 3-49	Connector #2, 18-pin Connector, A Key	3-47
Table 3-50	Connector #3 Pin Assignments – Fire Truck Application	3-48
Table 3-51	Connector #3, 21-pin Connector, Key A	3-48
Table 3-52	Connector #4 Pin Assignments – Fire Truck Application	3-49
Table 3-53	Connector #4, 18-pin Connector, Key C	3-49
Table 3-54	Connector #1 Pin Assignments – Crane Application	3-50
Table 3-55	Connector #1, 18-pin Connector, B Key	3-50
Table 3-56	Connector #2 Pin Assignments – Crane Application	3-51
Table 3-57	Connector #2, 18-pin Connector, A Key	3-51
Table 3-58	Connector #3 Pin Assignments – Crane Application	3-52
Table 3-59	Connector #3, 21-pin Connector, Key A	3-52
Table 3-60	Connector #4 Pin Assignments – Crane Application	3-53
Table 3-61	Connector #4, 18-pin Connector, Key C	3-53
Table 3-62	Connector #1 Pin Assignments – Transit Bus Application	3-54
Table 3-63	Connector #1, 18-pin Connector, B Key	3-54
Table 3-64	Connector #2 Pin Assignments – Transit Bus Application	3-55
Table 3-65	Connector #2, 18-pin Connector, A Key	3-55
Table 3-66	Connector #3 Pin Assignments – Transit Bus Application	3-56
Table 3-67	Connector #3, 21-pin Connector, Key A	3-56
Table 3-68	Connector #4 Pin Assignments – Transit Bus Application	3-57
Table 3-69	Connector #4, 18-pin Connector, Key C	3-57
Table 3-70	21-Pin Connector to the MCM	3-58
Table 3-71	21-Pin Connector to the MCM Part Numbers	3-58
Table 3-72	31-pin MCM Pigtail Connector Part Numbers	3-59
Table 3-73	31-pin MCM Pigtail Connector	3-60
Table 3-74	Wire Characteristics	3-63
Table 3-75	J1939 CPC to VIH Connector Pin Assignments	3-63
Table 3-76	Propriety Engine-CAN Data Link	3-65
Table 3-77	Maximum Average Current Draw	3-66
Table 3-78	Current Draw for CPC Configuration	3-66
Table 3-79	Current Draw for MCM Configuration	3-66
Table 3-80	Fuse Current and Blow Time	3-69
Table 3-81	Fuse Temperature and Current	3-69
Table 3-82	Connector #1, 18-pin Connector, B Key	3-70
Table 3-83	Connector #2, 18-pin Connector, A Key	3-70
Table 3-84	CPC Connector #3, 21-pin Connector, Key A	3-70
Table 3-85	CPC Connector #4, 18-pin Connector, Key C	3-70
Table 3-86	21-Pin Connector to the MCM Part Numbers	3-71
Table 3-87	31-pin MCM Pigtail Connector Part Numbers	3-71

Table 3-88	DDC Part Numbers for the DPF 10-pin and 2-pin Connector — Horizontal Mount ATD	3-71
Table 3-89	DDC Part Numbers for the DPF 10-pin Connector — Vertical Mount ATD	3-71
Table 3-90	VIH Components to Incorporate an SAE J1939/J1587 Data Link	3-72
Table 3-91	Crimp Tools	3-74
Table 3-92	Removal Tools for Deutsch Terminals	3-76
Table 3-93	Recommended Splicing Tools	3-78
Table 3-94	Applied Load Criteria for Terminals	3-80
Table 3-95	Recommended Splicing Tools	3-80
Table 3-96	Applied Load Criteria for Terminals	3-81
Table 3-97	Recommended Splicing Tools	3-83
Table 3-98	Sensor Types	3-91
Table 3-99	Function of Factory-installed Sensors	3-92
Table 3-100	Function and Guidelines for OEM-installed Sensors	3-94
Table 3-101	Ambient Air Temperature Sensor Parameters	3-96
Table 3-102	Metri-Pack 280 Connectors and Part Numbers	3-97
Table 3-103	ECL Sensor Installation Kit 1/4 in. NPTF P/N: 23515397	3-100
Table 3-104	ECL Sensor Installation Kit 3/8 in. NPTF P/N: 23515398	3-100
Table 3-105	Enabling the Engine Coolant Level Sensor	3-100
Table 3-106	Vehicle Speed Sensor Parameters	3-103
Table 3-107	Magnetic Pickup Vehicle Speed Sensor Requirements	3-103
Table 3-108	Vehicle Speed Sensor Wiring	3-103
Table 3-109	Vehicle Speed Sensor Parameters for J1939 Option	3-105
Table 3-110	DPF Regeneration Lamp Options	3-109
Table 3-111	High Exhaust System Temperature Lamp Options	3-111
Table 3-112	Low Oil Pressure Lamp Programming Options	3-112
Table 3-113	Cruise Active Lamp Programming Options	3-113
Table 3-114	Deceleration Lamp Programming Options	3-114
Table 3-115	Low Battery Voltage Lamp Programming Options	3-115
Table 3-116	Low Coolant Level Lamp Programming Options	3-116
Table 3-117	Optimized Idle Active Lamp Programming Options	3-117
Table 3-118	Wait to Start Lamp Programming Options	3-118
Table 3-119	AGS2 Backup Lamp Programming Options	3-119
Table 3-120	AGS2 Check Trans Lamp Programming Options	3-120
Table 3-121	AGS2 Trans Temp Lamp Programming Options	3-121
Table 4-1	DDEC VI Inputs	4-3
Table 4-2	Air Condition Status Programming Options	4-4
Table 4-3	ABS Programming Options	4-5
Table 4-4	Aux Shutdown #1 Programming Options	4-6
Table 4-5	Clutch Switch Programming Options	4-7
Table 4-6	Cruise Control On/Off Switch Programming Options	4-8
Table 4-7	Cruise Control Resume/Accel Switch Programming Options	4-9
Table 4-8	Diagnostic Request Switch Programming Options	4-10
Table 4-9	Dual-speed Axle Switch Programming Options	4-11
Table 4-10	Engine Brake Disable Programming Options	4-12
Table 4-11	Level of Engine Braking	4-13
Table 4-12	Engine Brake Switch Programming Options	4-13

Table 4-13	Fast Engine Heat Up Switch Programming Options	4-14
Table 4-14	Hood Tilt Switch Programming Options	4-16
Table 4-15	OI Thermostat Programming Options	4-17
Table 4-16	Configuring the Park Brake Switch Input	4-18
Table 4-17	Regen Switch Programming Options	4-19
Table 4-18	Configuring the Remote Accelerator Select Input	4-20
Table 4-19	RPM Freeze Programming Options	4-21
Table 4-20	Configuring the Service Brake Switch Input	4-22
Table 4-21	Diagnostic Request Switch Programming Options	4-23
Table 4-22	Configuring the Transmission Neutral Switch Input	4-24
Table 4-23	Transmission Retarder Input Options	4-25
Table 4-24	Source Address Options	4-27
Table 4-25	Parameters for Multiplexing	4-28
Table 4-26	Digital Outputs – CPC	4-29
Table 4-27	Digital Outputs – CPC	4-29
Table 4-28	AGS2 Backup Lamp Programming Options	4-30
Table 4-29	AGS2 Check Transmission Indication Lamp Programming Options	4-31
Table 4-30	AGS2 Transmission Temp Indication Lamp Programming Options	4-32
Table 4-31	Cruise Active Lamp Programming Options	4-33
Table 4-32	Deceleration Lamp Programming Options	4-34
Table 4-33	DPF Regeneration Lamp Programming Options	4-35
Table 4-34	Engine Brake Active Programming Options	4-36
Table 4-35	Ether Start Options	4-37
Table 4-36	High Exhaust System Temperature Lamp Options	4-38
Table 4-37	Low Battery Voltage Lamp Programming Options	4-39
Table 4-38	Coolant Level Low Lamp Programming Options	4-40
Table 4-39	Low Oil Pressure Lamp Programming Options	4-41
Table 4-40	Optimized Idle Active Lamp Programming Options	4-42
Table 4-41	Optimized Idle Alarm Programming Options	4-43
Table 4-42	Starter Lockout Programming Options	4-44
Table 4-43	Top2 Shift Solenoid Programming Options	4-45
Table 4-44	Top2 Shift Lockout Solenoid Programming Options	4-46
Table 4-45	Vehicle Power Shutdown Programming Options	4-47
Table 4-46	Wait to Start Lamp Programming Options	4-48
Table 4-47	Analog Output Selections for CPC Pin 3/05	4-49
Table 4-48	Analog Output Selections for CPC Pin 3/06	4-49
Table 4-49	Analog Output Options	4-50
Table 4-50	Frequency vs. Speed	4-51
Table 4-51	PWM Output Options	4-51
Table 5-1	Acceleration Limiter Parameters and Options	5-3
Table 5-2	Cold Start States and Outputs	5-5
Table 5-3	Cold Start Parameters	5-8
Table 5-4	Cold Start Failures and Action Taken	5-8
Table 5-5	Three Cruise Control Operation Modes	5-9
Table 5-6	Cruise Control Input Configuration	5-14
Table 5-7	Cruise Control Parameters	5-15
Table 5-8	Instrument Panel Lamps	5-18

Table 5-9	Flashing Fault Code Parameters	5-20
Table 5-10	Dual Speed Axle Digital Input	5-21
Table 5-11	Programming the Axle Ratios	5-21
Table 5-12	MCM Configuration Parameter for Exhaust Flap Applications - MBE 900 Engine	5-25
Table 5-13	CPC Configuration Parameter for Exhaust Flap Applications - MBE 900 Engine	5-27
Table 5-14	MCM Configuration Parameter for Compression Brake Applications - MBE 900 Engine	5-28
Table 5-15	CPC Configuration Parameter for Compression Brake Applications - MBE 900 Engine	5-30
Table 5-16	MCM Configuration Parameter for Compression and Exhaust Brake Applications - MBE 900 Engine	5-31
Table 5-17	CPC Configuration Parameter for Compression and Exhaust Brake Applications - MBE 900 Engine	5-33
Table 5-18	MCM Configuration Parameter for Compression and Brake Gate Applications - MBE 4000 Engine	5-34
Table 5-19	CPC Configuration Parameter for MBE 4000 Compression Brake and Brake Gate Applications	5-36
Table 5-20	Cruise Control and Road Speed Limit Engine Brake Parameters	5-37
Table 5-21	Optional Digital Output for Engine Brakes	5-37
Table 5-22	Optional Fan Braking for Engine Brakes	5-38
Table 5-23	Service Brake Control of Engine Brake Parameter	5-38
Table 5-24	Minimum Vehicle Speed for Engine Brakes Option	5-38
Table 5-25	CPC Configuration Parameter for Jake Brake Applications	5-43
Table 5-26	Cruise Control and Road Speed Limit Engine Brake Parameters	5-44
Table 5-27	Optional Digital Output for Engine Brakes	5-44
Table 5-28	Optional Fan Braking for Engine Brakes	5-45
Table 5-29	Service Brake Control of Engine Brakes Parameter	5-45
Table 5-30	Minimum MPH for Engine Brakes Option	5-45
Table 5-31	Engine Protection	5-49
Table 5-32	Series 60 Engine Ratings	5-51
Table 5-33	Engine Starter Control Settings — MCM	5-54
Table 5-34	Current vs Inductance	5-54
Table 5-35	Single-speed Fan – Type 4 MCM Options	5-59
Table 5-36	Single-speed Fan – Type 4 CPC Options	5-60
Table 5-37	Single-speed Fan – Type 7 MCM Options	5-62
Table 5-38	Single-speed Fan – Type 7 CPC Options	5-63
Table 5-39	Dual Fan – Type 6 MCM Options	5-66
Table 5-40	Dual Fan – Type 6 CPC Options	5-67
Table 5-41	Two-speed Fan – Type 1 MCM Options	5-70
Table 5-42	Two-speed Fan – Type 1 CPC Options	5-71
Table 5-43	Variable Speed Fan Without Fan Speed Feedback – Type 3 MCM Options	5-74
Table 5-44	Variable Speed Fan Without Fan Speed Feedback – Type 3 CPC Options	5-75
Table 5-45	Variable Speed Fan With Fan Speed Feedback – Type 2 Options	5-78
Table 5-46	Variable Speed Fan with Fan Speed Feedback – Type 2 CPC Options	5-79
Table 5-47	DDEC Data Parameters for Fleet Management	5-82

Table 5-48	Fuel Economy Limits	5-89
Table 5-49	Fuel Economy Incentive Parameters	5-90
Table 5-50	Idle Adjust Parameters	5-92
Table 5-51	Idle Shutdown Timer Programming Options	5-99
Table 5-52	Limiter Pin Assignments	5-102
Table 5-53	Limiter 0 and Limiter 1 Parameters	5-103
Table 5-54	Minimum and Maximum Engine Speed Parameters	5-103
Table 5-55	Transmission Ratios	5-105
Table 5-56	Transmission Ratios	5-106
Table 5-57	Low Gear Torque Limiting Parameters	5-107
Table 5-58	Voltage Threshold Based on Ambient Air Temperature	5-110
Table 5-59	Normal Battery Run Mode	5-111
Table 5-60	Alternate Battery Run Mode	5-111
Table 5-61	Continuous Battery Run Mode	5-111
Table 5-62	Optimized Idle Digital Inputs and Digital Outputs	5-114
Table 5-63	Optimized Idle Options	5-114
Table 5-64	Engine Protection Parameters	5-115
Table 5-65	Parked Regeneration Options	5-118
Table 5-66	Parameter Settings for Manual Transmissions	5-119
Table 5-67	Parameter Settings for J1939 Transmissions (Allison, Eaton UltraShift, Eaton AutoShift)	5-119
Table 5-68	DPF Stationary Regen Only Parameter	5-119
Table 5-69	PasSmart Settings	5-122
Table 5-70	PasSmart Parameters	5-123
Table 5-71	Protected Parameters	5-125
Table 5-72	Progressive Shift Programming	5-131
Table 5-73	Starter Lockout	5-134
Table 5-74	Cruise Switch PTO Digital Inputs	5-142
Table 5-75	Cruise Switch PTO Parameters (1 of 2)	5-143
Table 5-76	Cruise Switch PTO Parameters (2 of 2)	5-144
Table 5-77	Gray Coded Inputs	5-147
Table 5-78	Binary Inputs	5-147
Table 5-79	Remote PTO Parameters (1 of 2)	5-148
Table 5-80	Remote PTO Parameters (2 of 2)	5-149
Table 5-81	Remote Accelerator Control Parameter Settings	5-150
Table 5-82	RPM Freeze Programming Options	5-152
Table 5-83	Manual Transmission Options	5-153
Table 5-84	AGS2 Connector	5-155
Table 5-85	AGS2 Transmission Programming Requirements for Non-Multiplexed Vehicles	5-156
Table 5-86	AGS2 Transmission Programming Requirements for Multiplexed Vehicles	5-157
Table 5-87	Top2 Reprogramming Choices	5-158
Table 5-88	Eaton UltraShift Transmission Parameters	5-160
Table 5-89	Eaton UltraShift ASW Transmission Parameters	5-161
Table 5-90	Eaton AutoShift Transmission Parameters	5-162
Table 5-91	ZF Astronic Transmission Parameters	5-163
Table 5-92	Allison Transmission Parameters	5-165

Table 5-93	Vehicle Speed Limiting Parameters	5-167
Table 5-94	VSS Anti-tampering Parameters	5-169
Table 6-1	Identifiers Used by CPC	6-4
Table 6-2	Message Priority Assignments	6-5
Table 6-3	J1939 Source Address	6-28
Table C-1	DDEC VI Parameters	C-17

