



- NOTES:
1. ARROW ON SINGLE CHECK VALVE, ITEM #11, MUST BE POSITIONED AS SHOWN.
 2. THE QUICK RELEASE VALVE, MUST BE LOCATED TO CHASSIS WITH EXHAUST PORT DOWN.
 3. BUZZER, ITEM #8, MUST BE LOCATED ON THE LOWER DASH PANEL.
 4. AIR GAUGES, ITEM #105 & #106, MUST BE LOCATED ON THE INSTRUMENT PANEL.
 5. AIR WARNING LIGHT, ITEM #41, MUST BE LOCATED ON THE INSTRUMENT PANEL.
 6. PARKING BRAKE VALVE, ITEM #13, MUST BE LOCATED ON THE LOWER HALF OF INSTRUMENT PANEL.
 7. LOW PRESSURE INDICATOR, ITEM #15, MUST BE LOCATED ON THE WET TANK SIDE OF PRESSURE VALVE.
 8. ARROW ON PRESSURE PROTECTION VALVE, ITEM #2, MUST BE POSITIONED AS SHOWN.

NOTE:
FOR DIAGRAM, DUAL AIR BRAKE, SHEET 2 OF 2, 42 FT WLVB, SEE DRAWING NO, 1702267

MATERIAL:		FINISH		COLOR OR TYPE	
FLAT SIZE:		PAINT			
		PRIME			
		OTHER			
TOLERANCE ON ALL DIMENSIONS IS, PLUS OR MINUS UNLESS OTHERWISE SPECIFIED, SCALE		DD		NOT SCALE	
INACTIVES WGS.					
DR.	6-27-94	BY	SHC	APP.	6-27-94
DR.	6-27-94	BY	DCU	APP.	6-27-94
1122009		1782259		1 OF 2	
UNDATED REVISIONS AND ADDED DETAIL		REVISED		DATE	
LEFT		REVISED		DATE	
CON		REVISED		DATE	
1122009		1782259		1 OF 2	
DIAGRAM, DUAL AIR BRAKE, SHEET 1 OF 2		SCALE			
BLUE BIRD CORPORATION		DR.		APP.	
FORT WALLEY GEORGIA, U.S.A.		CON			
42 FT WLVB					

UPDATED BY
PPH 190724
Date 4/23/96

SHEET / 92