



NOTES:

1. ARROW ON SINGLE CHECK VALVE, ITEM #11, MUST BE POSITIONED AS SHOWN.
2. THE QUICK RELEASE VALVE, MUST BE LOCATED TO CHASSIS WITH EXHAUST PORT DOWN.
3. BUZZER, ITEM #8, MUST BE LOCATED ON THE LOWER DASH PANEL.
4. AIR GAUGES, ITEM #105 & #106, MUST BE LOCATED ON THE INSTRUMENT PANEL.
5. AIR WARNING LIGHT, ITEM #41, MUST BE LOCATED ON THE INSTRUMENT PANEL.
6. PARKING BRAKE VALVE, ITEM #13, MUST BE LOCATED ON THE LOWER HALF OF INSTRUMENT PANEL.
7. LOW PRESSURE INDICATOR, ITEM #15, MUST BE LOCATED ON THE WET TANK SIDE OF PRESSURE VALVE.
8. ARROW ON PRESSURE PROTECTION VALVE, ITEM #2, MUST BE POSITIONED AS SHOWN.

NOTE:

FOR DIAGRAM, DUAL AIR BRAKE, SHEET 2 OF 2

RELBRAT FRAME 1 NOVEMBER 9, 1995 12.09.17