(10/12/95) PRTROOM2.

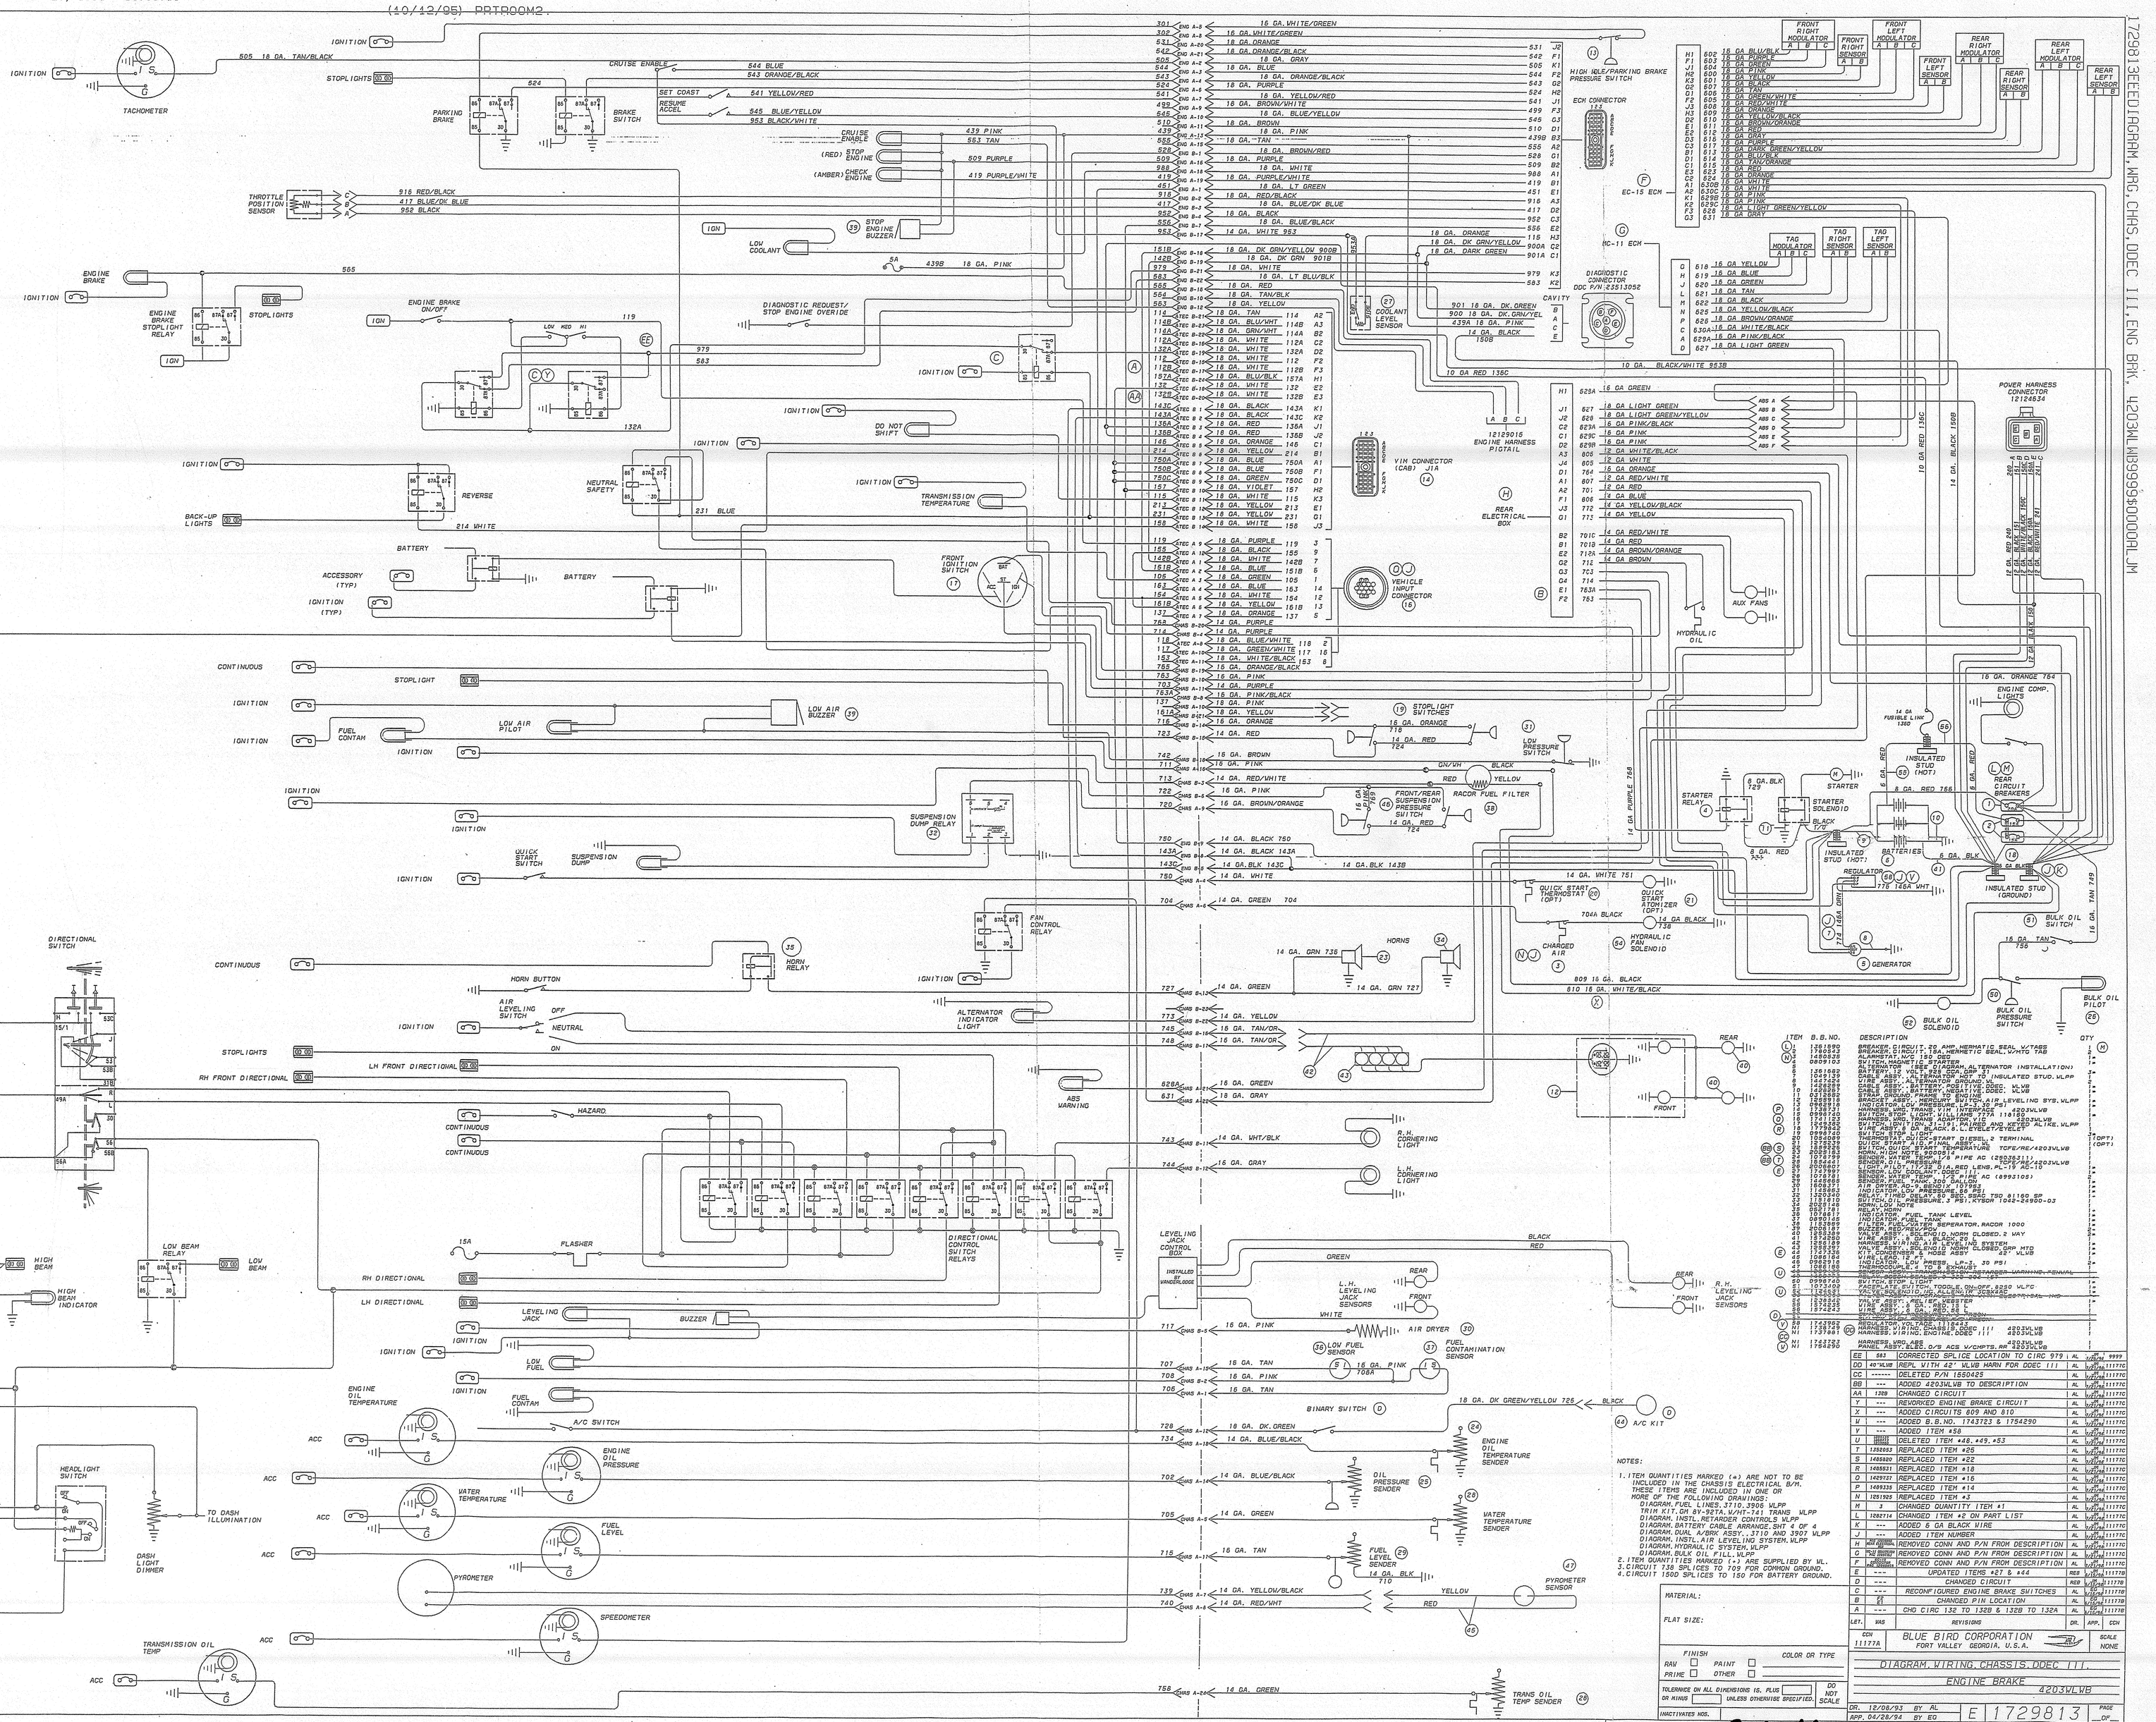
IGNITION
TACHOMETER
505 16 GA. TAN/BLACK
STOPLIGHTS
PARKING BRAKE
524
BRAKE SWITCH
CRUISE ENABLE
544 BLUE
543 ORANGE/BLACK
SET COAST
541 YELLOW/RED
RESUME ACCEL
545 BLUE/YELLOW
953 BLACK/WHITE
CRUISE ENABLE
(RED) STOP ENGINE
(AMBER) CHECK ENGINE
439 PINK
553 TAN
509 PURPLE
419 PURPLE/WHITE
THROTTLE POSITION SENSOR
916 RED/BLACK
417 BLUE/DK BLUE
952 BLACK
IGN
LOW COOLANT
39 STOP ENGINE BUZZER
5A
439B 18 GA. PINK
ENGINE BRAKE
565
ENGINE BRAKE STOPLIGHT RELAY
ENGINE BRAKE ON/OFF
119
LOW MED HI
EC
979
583
132A
DIAGNOSTIC REQUEST/ STOP ENGINE OVERIDE
DO NOT SHIFT
TRANSMISSION TEMPERATURE
REVERSE
214 WHITE
NEUTRAL SAFETY
231 BLUE
BACK-UP LIGHTS
BATTERY
ACCESSORY (TYP)
IGNITION (TYP)
FRONT IGNITION SWITCH
17
BAT
ACC
IGN
ST
CONTINUOUS
STOPLIGHT
LOW AIR PILOT
LOW AIR BUZZER
39
FUEL CONTAM
SUSPENSION DUMP RELAY
QUICK START SWITCH
SUSPENSION DUMP
FAN CONTROL RELAY
35
HORN RELAY
HORN BUTTON
AIR LEVELING SWITCH
OFF
NEUTRAL
ON
ALTERNATOR INDICATOR LIGHT
ABS WARNING
HAZARD
DIRECTIONAL SWITCH RELAYS
15A
FLASHER
RH DIRECTIONAL
LH DIRECTIONAL
LEVELING JACK
BUZZER
LOW FUEL
FUEL CONTAM
A/C SWITCH
ENGINE OIL TEMPERATURE
ENGINE OIL PRESSURE
WATER TEMPERATURE
FUEL LEVEL
PYROMETER
SPEEDOMETER
TRANSMISSION OIL TEMP
DIRECTIONAL SWITCH
HI BEAM RELAY
LOW BEAM RELAY
HIGH BEAM
LOW BEAM
HIGH BEAM INDICATOR
PARK AND TAIL LIGHTS
HEADLIGHT SWITCH
TO DASH ILLUMINATION
DASH LIGHT DIMMER
CONT
HIGH IDLE/PARKING BRAKE PRESSURE SWITCH
13
ECM CONNECTOR 111
EC-15 ECM
HC-11 ECM
DIAGNOSTIC CONNECTOR DDC P/N 23513052
COOLANT LEVEL SENSOR
27
CAVITY
901 18 GA. DK. GREEN
900 18 GA. DK. GRN/YEL
439A 18 GA. PINK
14 GA. BLACK
150B
10 GA RED 136C
10 GA. BLACK/WHITE 953B
VIM CONNECTOR (CAB) J1A
14
12129015 ENGINE HARNESS PIGTAIL
REAR ELECTRICAL BOX
VEHICLE INPUT CONNECTOR
16
AUX FANS
HYDRAULIC OIL
POWER HARNESS CONNECTOR 12124634
ENGINE COMP. LIGHTS
FRONT RIGHT MODULATOR
FRONT LEFT MODULATOR
REAR RIGHT MODULATOR
REAR LEFT MODULATOR
FRONT RIGHT SENSOR
FRONT LEFT SENSOR
REAR RIGHT SENSOR
REAR LEFT SENSOR
TAG MODULATOR
TAG RIGHT SENSOR
TAG LEFT SENSOR
STOPLIGHT SWITCHES
19
LOW PRESSURE SWITCH
31
FRONT/REAR SUSPENSION PRESSURE SWITCH
46
RACOR FUEL FILTER
38
STARTER RELAY
4
STARTER
STARTER SOLENOID
BATTERIES
6
REGULATOR
GENERATOR
5
INSULATED STUD (HOT)
INSULATED STUD (GROUND)
REAR CIRCUIT BREAKERS
QUICK START THERMOSTAT (OPT)
20
QUICK START ATOMIZER (OPT)
21
HYDRAULIC FAN SOLENOID
52
CHARGED AIR
3
BULK OIL SWITCH
51
BULK OIL PILOT
BULK OIL SOLENOID
22
BULK OIL PRESSURE SWITCH
50
HORNS
23
34
R.H. CORNERING LIGHT
L.H. CORNERING LIGHT
LEVELING JACK CONTROL BOX
INSTALLED BY WAREHOUSE
L.H. LEVELING JACK SENSORS
R.H. LEVELING JACK SENSORS
AIR DRYER
30
LOW FUEL SENSOR
FUEL CONTAMINATION SENSOR
37
BINARY SWITCH
A/C KIT
44
ENGINE OIL TEMPERATURE SENDER
24
OIL PRESSURE SENDER
25
WATER TEMPERATURE SENDER
28
FUEL LEVEL SENDER
29
PYROMETER SENSOR
47
TRANS OIL TEMP SENDER
TO CIRC 979
TO CIRC 901B
TO CIRC 901A
TO CIRC 952
TO CIRC 953
TO CIRC 916
TO CIRC 917
TO CIRC 918
TO CIRC 919
TO CIRC 920
TO CIRC 921
TO CIRC 922
TO CIRC 923
TO CIRC 924
TO CIRC 925
TO CIRC 926
TO CIRC 927
TO CIRC 928
TO CIRC