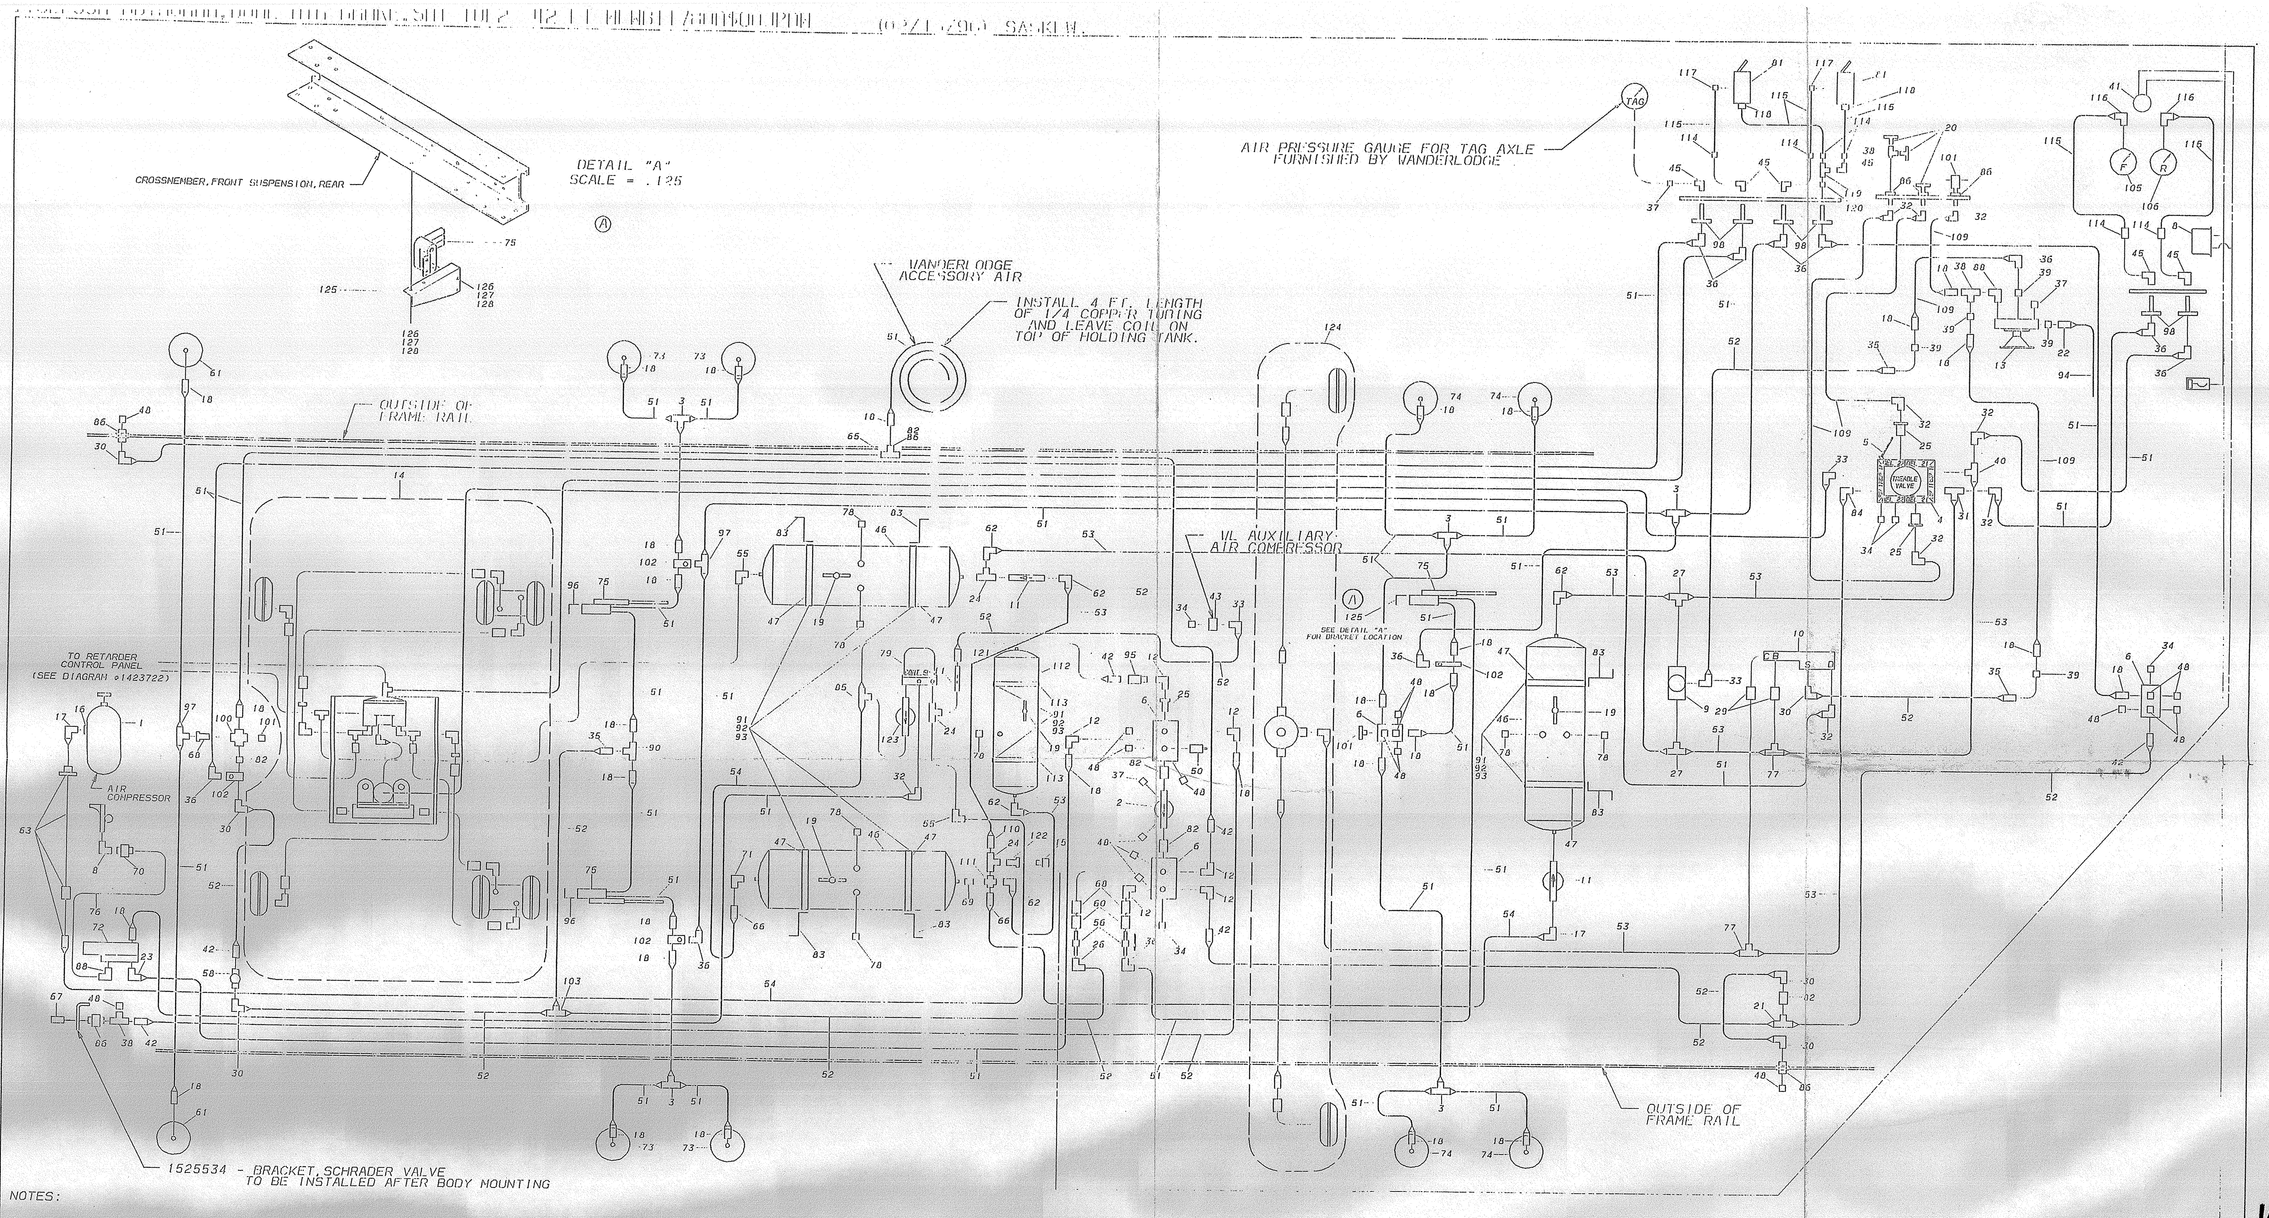

NOTES:

1. ARROW ON SINGLE CHECK VALVE, ITEM #11, MUST BE POSITIONED AS SHOWN.
2. THE QUICK RELEASE VALVE, MUST BE LOCATED TO CHASSIS WITH EXHAUST PORT DOWN.
3. BUZZER, ITEM #8, MUST BE LOCATED ON THE LOWER DASH PANEL.
4. AIR GAUGES, ITEM #105 & #106, MUST BE LOCATED ON THE INSTRUMENT PANEL.
5. AIR WARNING LIGHT, ITEM #41, MUST BE LOCATED ON THE INSTRUMENT PANEL.
6. PARKING BRAKE VALVE, ITEM #13, MUST BE LOCATED ON THE LOWER HALF OF INSTRUMENT PANEL.
7. LOW PRESSURE INDICATOR, ITEM #15, MUST BE LOCATED ON THE WET TANK SIDE OF PRESSURE VALVE.
8. ARROW ON PRESSURE PROTECTION VALVE, ITEM #2, MUST BE POSITIONED AS SHOWN.

NOTE:

FOR DIAGRAM, DUAL AIR BRAKE, SHEET 2 OF 2, 42 FT WLWB, SEE DRAWING NO. 1782267

MATERIAL:

FLAT SIZE:

FINISH: RAW ☐ PAINT ☐ PRIME ☐ OTHER ☐ COLOR OR TYPE

TOLERANCE ON ALL DIMENSIONS IS, PLUS ____ OR MINUS ____ UNLESS OTHERWISE SPECIFIED. DO NOT SCALE

INACTIVATES NOS.

LET.	WAS	REVISIONS	DR.	APP.	CCN
A	1261965	UPDATED BRACKET AND ADDED DETAIL	8-95	DCV	11780A

CCN 11280B

BLUE BIRD CORPORATION
FORT VALLEY GEORGIA, U.S.A.

SCALE —

DIAGRAM, DUAL AIR BRAKE, SHEET 1 OF 2,
42 FT WLWB.

DR. 6-27-94 BY SHC
APP. 6-27-94 BY DCV

D 1782259 PAGE 1 OF 2

RELEAT FRAME 1 NOVEMBER 9, 1995 12.09.17

SHEET/qd

UPDATED BY P/N 1907724 dated 4/23/96