




Service Information System

Shutdown SIS

[Previous Screen](#)


Product: TRUCK ENGINE
 Model: 3208 TRUCK ENGINE 02Z
 Configuration: 3208 Truck Engine Turbocharged 02Z40745-UP

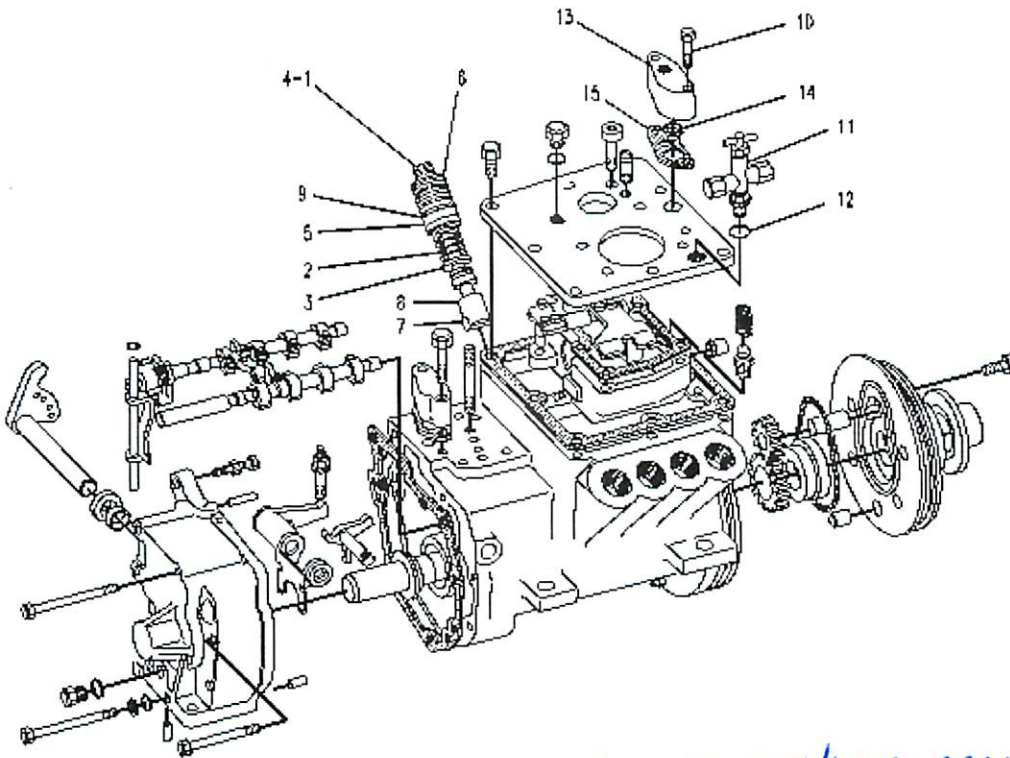

GRAPHIC #1


*If fuel is leaking around fuel solenoid
 Area you will need the following parts.
 (cost about \$10 9/2010)*

4N-3713 → this is the leaking seal
4N-0975 gasket
4N-3088 gasket
4N-0505 gasket
6L-5773 gasket
127-7139 gasket

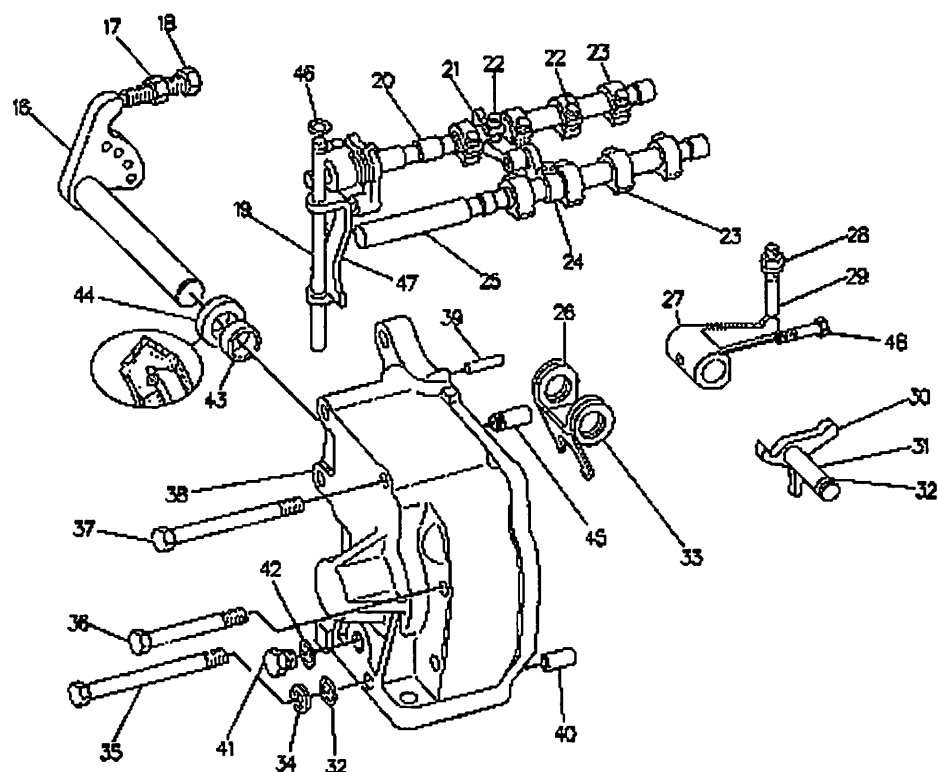


g00203310

GRAPHIC #2

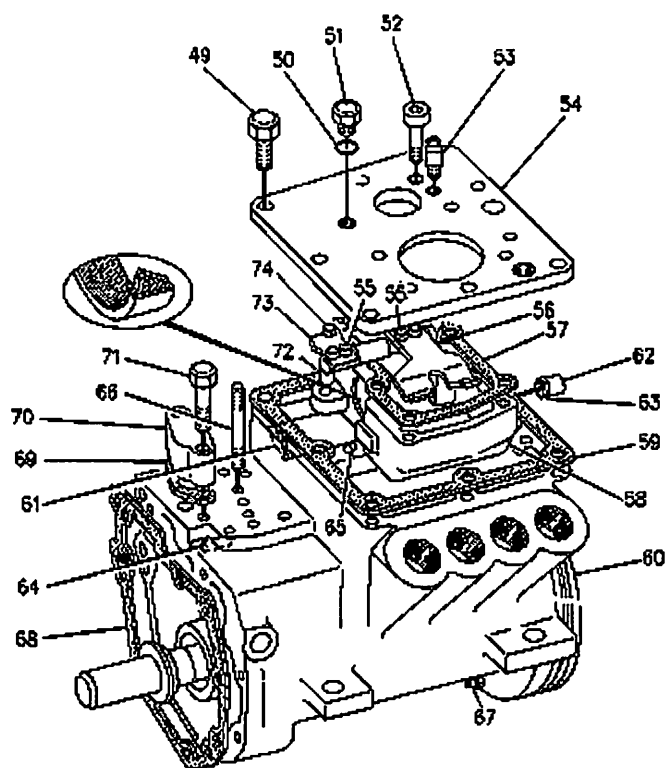


g00523370

GRAPHIC #3

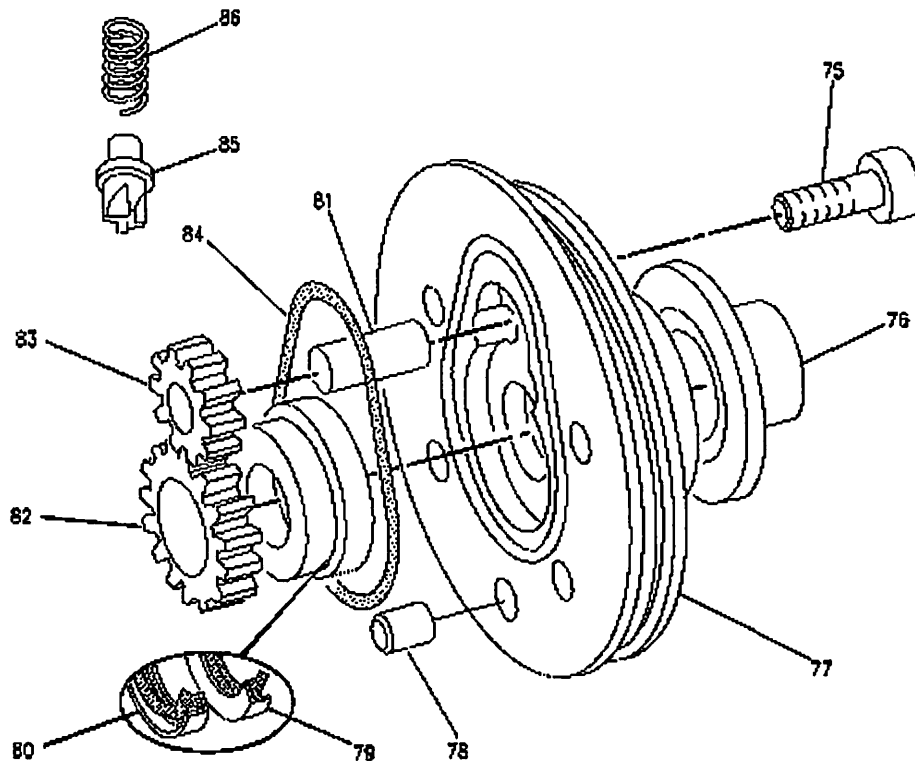

g00523374

GRAPHIC #4

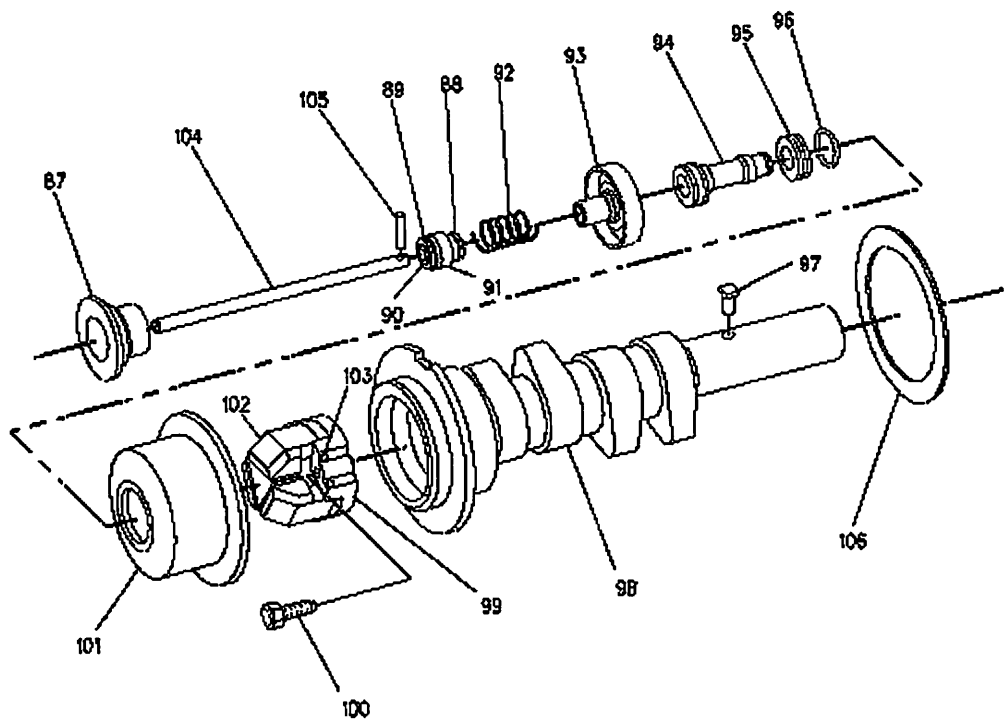

g00523382

GRAPHIC #5
g00523384

3208 Truck Engine TurbochargedMedia Number - SEBP1776-24 | Publication Date - 01/09/2010 | Date
Updated - 02/09/2010

I02458251

4P-4261 PUMP GP-GOV & FUEL INJ

S/N 02Z66136-67071

PART OF 4P-4260 PUMP GP-GOV & FUEL INJ**ENTIRE GROUP**

Ref. Qty.	NPR Note	Part No.	Part Name
Grp		4P-4261	PUMP GP-GOV & FUEL INJ

INDIVIDUAL PARTS

Ref. Qty.	NPR Note	GR#	Part No.	Req. Qty.	Part Name
1	<u>NPR</u>	1	4P-4259	8	PUMP AS-FUEL INJECTION (EACH INCLUDES)
	<u>NPR</u>	1	1W-3010	1	PUMP AS-FUEL INJECTION
2	<u>NPR</u>	1	9N-5862	1	SPRING-LIFTER
3	<u>NPR</u>	1	4N-2728	1	WASHER-RETAINING
4	<u>NPR</u>	1	7W-8039	1	BONNET-VALVE
	<u>NPR</u>	1	4P-3484	1	VALVE AS-CHECK
	<u>NPR</u>	1	8N-1415	1	SPRING-CHECK
	<u>NPR</u>	1	7C-9966	1	INSERT
5	<u>NPR</u>	1	4N-0224	1	RING-RETAINING
6	<u>NPR</u>	1	7W-8120	8	BUSHING-TERMINAL
7	<u>NPR</u>	1	9N-5827	8	ROLLER-FUEL PUMP LIFT
8	<u>NPR</u>	1	9N-5817	8	LIFTER-PLUNGER
9	<u>NPR</u>	1	6F-6672	8	SEAL-O-RING
10	<u>NPR</u>	1	2M-5471	2	BOLT
11	<u>NPR</u>	1	6N-1716	1	VALVE AS
12	<u>NPR</u>	1	3J-7354	1	SEAL-O-RING
13	<u>NPR</u>	1	9Y-0546	1	FLANGE AS
14	<u>NPR</u>	1	7E-5346	1	VALVE AS
15	<u>NPR</u>	1	4N-0975	1	GASKET-CHECK VALVE
16	<u>NPR</u>	2	4N-2773	1	SHAFT AS-CONTROL
17	<u>NPR</u>	2	5S-0003	1	NUT (5/16-18-THD)
18	<u>NPR</u>	2	4N-2708	1	SETSCREW
19	<u>NPR</u>	2	4N-0528	1	SHAFT-LEVER
20	<u>NPR</u>	2	4N-9828	1	SHAFT AS-CONTROL
21	<u>NPR</u>	2	4N-3922	1	LEVER AS
22	<u>NPR</u>	2	2N-2658	10	BOLT-SOCKET HEAD (8-32X15.88-MM)
23	<u>NPR</u>	2	9N-5820	8	LEVER-CONTROL

24	NPR	2	126-4144	1	LEVER-SHAFT
25	NPR	2	124-5941	1	SHAFT-CONTROL
26	NPR	2	7C-6201	1	LEVER-SEAT
27	NPR	2	7C-6202	1	LEVER
28	NPR	2	6F-0612	1	NUT-JAM (1/4-28-THD)
	NPR	2	6L-3921	1	WASHER-SPECIAL
29	NPR	2	6N-4176	1	SETSCREW
30	NPR	2	4N-0445	1	LEVER-LOAD STOP
	NPR	2	2M-7819	1	RING-RETAINING
31	NPR	2	4N-0523	1	DOWEL-STOP SUPPORT
32	NPR	2	2D-6392	2	SEAL-O-RING
33	NPR	2	4N-3329	2	WASHER (16.25X25.65X0.79-MM)
34	NPR	2	6N-7523	1	WASHER (6.48X11.9X1.57-MM THK)
35	NPR	2	8F-8178	1	BOLT (1/4-20X3.25-IN)
36	NPR	2	1D-4533	3	BOLT (1/4-20X2.25-IN)
37	NPR	2	2A-4781	3	BOLT (1/4-20X2.75-IN)
38	NPR	2	8N-3946	1	HOUSING AS-GOVERNOR
39	NPR	2	4N-2333	1	PIN-SPRING
40	NPR	2	8S-6814	2	PIN
41	NPR	2	9S-4182	1	PLUG-O-RING
42	NPR	2	3J-7354	1	SEAL-O-RING
43	NPR	2	8N-3945	1	BUSHING-TERMINAL
44	NPR	2	2W-4037	1	SEAL-LIP TYPE
45	NPR	2	9Y-4966	1	VALVE AS-RELIEF
	NPR	2	2D-6392	1	SEAL-O-RING
46	NPR	2	3H-0442	1	SEAL-O-RING
47	NPR	2	128-7347	1	LEVER AS-RISER
48	NPR	2	7X-2395	1	BOLT-LOCKING
49	NPR	3	0S-1615	7	BOLT (1/4-20X0.75-IN)
50	NPR	3	3J-7354	1	SEAL-O-RING
51	NPR	3	9S-4182	1	PLUG-O-RING
52	NPR	3	8H-3127	2	BOLT (1/4-20X0.75-IN)
53	NPR	3	9S-9332	1	FITTING-ELBOW
54	NPR	3	124-5939	1	COVER-FUEL PUMP HOUSING
55	NPR	3	6D-3031	4	SCREW-SOCKET HEAD (8-32X0.375-IN)
56	NPR	3	4N-0941	1	LEVER-LIMITER
57	NPR	3	4N-0505	1	GASKET-HOUSING

58	NPR	3	128-2974	1	HOUSING AS (SHUT-OFF)
	NPR	3	4N-3713	1	SEAL-LIP TYPE
59	NPR	3	127-7139	1	GASKET-TOP COVER
60	NPR	3	132-2117	1	HOUSING AS-PUMP
	NPR	3	9S-4180	1	PLUG
	NPR	3	4J-7533	1	SEAL-O-RING
61	NPR	3	9N-5821	2	DEFLECTOR-PULSE
62	NPR	3	4N-1826	2	DOWEL
63	NPR	3	2D-6392	2	SEAL-O-RING
64	NPR	3	4N-2333	1	PIN-SPRING
65	NPR	3	8N-0984	8	PIN-SPRING
66	NPR	3	4N-5481	1	STUD
67	NPR	3	1P-4001	1	FITTING
68	NPR	3	4N-0556	1	GASKET-GOVERNOR HOUSING
69	NPR	3	4N-0532	1	GASKET-COVER
70	NPR	3	4N-0531	1	COVER-IDLE SCREW
71	NPR	3	6L-1756	2	BOLT (1/4-20X1.5-IN)
72	NPR	3	4N-0938	1	SHAFT-LEVER
73	NPR	3	4N-0940	1	LEVER-SHUTOFF
74	NPR	3	124-5942	1	SHAFT-SOLENOID
75	NPR	4	9F-6641	4	BOLT (5/16-18X1.25-IN)
76	NPR CL	4	4N-2954	1	SLEEVE-CAMSHAFT
CL	NPR	4	299-2059	1	SLEEVE-CLA
77	NPR	4	4N-1132	1	BODY AS-TRANSFER PUMP
78	NPR	4	8S-6814	1	PIN
79	NPR	4	4N-1584	1	SEAL-LIP TYPE
80	NPR	4	4N-0636	1	SEAL-LIP TYPE
81	NPR	4	8H-9804	1	SHAFT-PUMP IDLER
82	NPR	4	4N-0429	1	GEAR-PUMP (15-TEETH)
83	NPR	4	4N-0406	1	GEAR-PUMP (10-TEETH)
84	NPR	4	5M-6509	1	SEAL-O-RING
85	NPR	4	4N-1767	1	VALVE-BYPASS
86	NPR	4	4N-0605	1	SPRING
87	NPR	5	4N-4276	1	SEAT-SPRING
88	NPR	5	4N-6408	1	PISTON AS
89	NPR	5	4N-6406	1	RING-SPACER
90	NPR	5	4N-6404	1	RING-RETAINING

A LEAK
IN THIS SEAL
WILL LET FUEL
INTO AREA UNDER FUEL
SOLENOID - AND IT WILL
LEAK OUT INTO VALLEY

91	NPR	5	4N-6407	1	SPOOL-DASHPOT
92	NPR	5	6N-2517	1	SPRING-DASHPOT
93	NPR	5	2W-8623	1	SEAT-SPRING
94	NPR	5	4N-0434	1	RISER-GOVERNOR
95	NPR	5	4N-2927	2	RACE-THRUST BEARING
	NPR	5	7M-7219	1	BEARING-THRUST
96	NPR	5	4N-2953	1	RING-LOCK
97	NPR	5	4N-3779	1	KEY-CAMSHAFT
98	NPR	5	7W-6827	1	CAMSHAFT AS
	NPR	5	7W-6831	1	CAMSHAFT-FUEL PUMP
99	NPR	5	8N-2663	1	CARRIER-WEIGHT
100	NPR	5	8N-2662	3	BOLT-SOCKET HEAD
101	NPR	5	4N-1723	1	SHIELD-CARRIER
102	NPR	5	4N-0425	3	WEIGHT-GOVERNOR
103	NPR	5	4N-0511	3	DOWEL
104	NPR	5	4N-5482	1	SHAFT-WEIGHT CARRIER
105	NPR	5	4N-9019	1	DOWEL
106	NPR	5	9N-5822	1	WASHER-THRUST

Key:

CL - Classic Part Available

SMCS Codes		
1286		

1

Copyright 1993 - 2010 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

Tue Sep 7 13:02:08 CDT 2010